



# User Manual

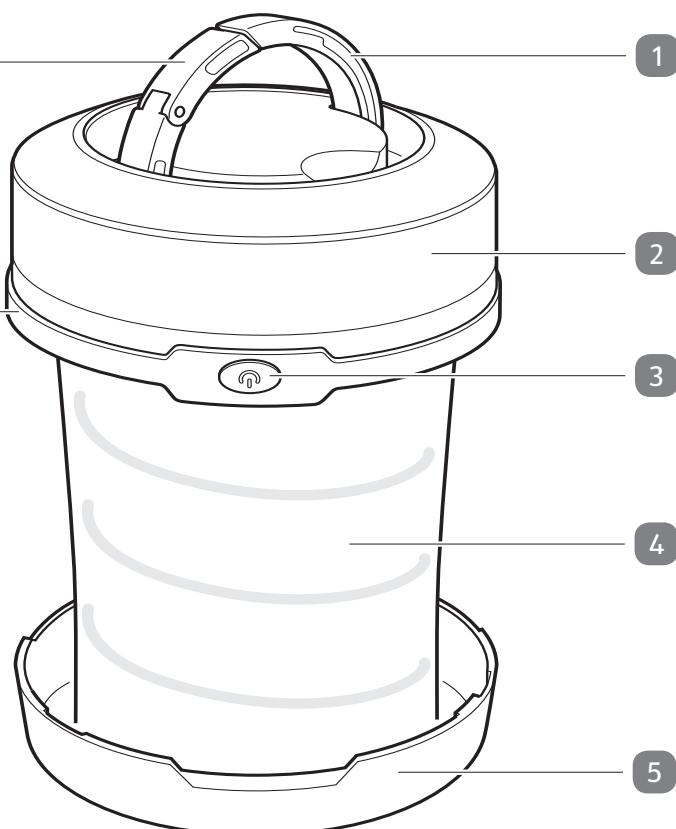


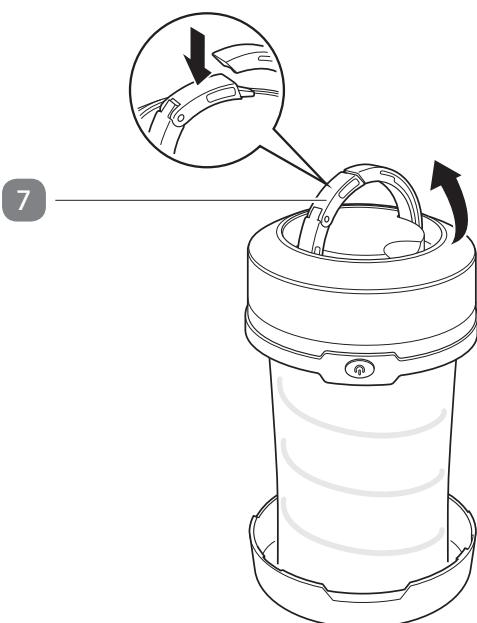
## POP-UP LANTERN



# Contents

<b>Overview .....</b>	<b>3</b>
<b>Use.....</b>	<b>4</b>
<b>Package contents/device parts.....</b>	<b>5</b>
<b>General information.....</b>	<b>6</b>
Reading and storing the user manual .....	6
Explanation of symbols .....	6
<b>Safety .....</b>	<b>7</b>
Proper use.....	7
Safety instructions.....	7
<b>First use.....</b>	<b>10</b>
Checking the light and product contents.....	10
Inserting or changing the batteries .....	10
<b>Use.....</b>	<b>11</b>
Switching the light on and off .....	11
Folding and unfolding the lampshade .....	11
Hanging up the light.....	11
<b>Cleaning.....</b>	<b>11</b>
<b>Storage .....</b>	<b>12</b>
<b>Technical data .....</b>	<b>12</b>
<b>Declaration of Conformity.....</b>	<b>12</b>
<b>Disposal.....</b>	<b>13</b>
Disposing of the packaging .....	13
Disposing of the light .....	13

**A**

**B****C**

# Disposal

## Disposing of the packaging



Dispose of the packaging separated into single type materials.  
Dispose of paperboard and cardboard with waste paper and plastics with recyclable waste.

## Disposing of the light

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



### **Old devices must not be disposed of with household waste!**

If at some point it is no longer possible to use the light, all consumers are **required by law to dispose of old devices separately from their household waste**, for example, at a collection point in their municipality/borough. This ensures that old appliances are recycled properly and helps prevent any negative impact on the environment. For this reason, electrical equipment is marked with the symbol shown here.



### **Batteries and rechargeable batteries must not be disposed of with household waste!**

As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances\* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Dispose of the light (including the battery) at your collection point in a discharged state only!

\*labelled with: Cd = cadmium, Hg = mercury, Pb = lead

## Package contents / device parts

- 1 Carrying handle/suspension hook
- 2 Battery compartment cover
- 3 On/Off button
- 4 Lampshade
- 5 Lower cap
- 6 Upper cap
- 7 Hinge

The package contents include three type LR6 (AA) 1.5 V batteries.

# General information

## Reading and storing the user manual



This user manual accompanies this pop-up lantern (hereinafter referred to simply as the “light”). It contains important information about setting up and using the device.

Before using the light, please read through the user manual carefully.

This particularly applies to the safety instructions. Failure to observe this user manual may result in severe injury or damage to the light.

The user manual is based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Store the user manual for future use. If you pass the light on to third parties, please be absolutely sure to include this user manual.

## Explanation of symbols

The following symbols and signal words are used in this user manual, on the light or on the packaging.



### **WARNING!**

This signal symbol/word designates a hazard with a moderate degree of risk which may lead to death or severe injury if not avoided.

### **NOTICE!**

This signal word warns against potential damages to property.



This symbol provides you with useful supplementary information about assembly or operation.

III

The symbol indicates that the product design corresponds to protection class III.



### **WARNING – RISK OF SUFFOCATION!**



Declaration of Conformity (see “Declaration of Conformity” chapter): Products marked with this symbol meet all applicable Community regulations for the European Economic Area.

# Safety

## Proper use

This light is exclusively designed as a light source for camping. It is only intended for private use and is not suitable for commercial purposes. This light is used for accent lighting and is not suitable for room lighting in the home.

Only use the light as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury. The light is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

The light source in this light cannot be replaced. Once the light source has reached the end of its service life, the entire light must be replaced.

## Safety instructions



### WARNING!

#### Risk of injury!

Handling the light improperly may result in injury.

- When in operation, do not look into the light for a prolonged period. This may be harmful to the eyes.
- Do not leave the light unattended while in use.



### WARNING!

#### Risk of electric shock!

There is a risk of electric shock if used improperly.

- Do not use the light if it exhibits visible signs of damage.
- Do not open the housing; always have a qualified professional carry out any repairs. Contact a qualified workshop for this. Liability and warranty claims are waived in the event of repairs performed by the user or incorrect operation.
- Only parts that comply with the original device data may be used for repairs. This light contains electrical and mechanical parts which are essential for providing protection against sources of danger.

## Safety

---

- Only use the device when fully assembled.
- Never place any external objects on the light and do not cover it.
- Do not place objects with open flames, such as candles or liquid-filled objects, e.g. coffee cups on the light or near to it.
- Keep the light away from open fire and hot surfaces.
- Never store the light in such a way that there is a risk of it falling into a tub or sink.
- Always switch the light off when you are not using the light, cleaning it or in the event of a fault.



### **WARNING!**

- This light may be used by children aged eight and over as well as persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the light and have understood the risks associated with using it. Children must not play with the light. Cleaning and user maintenance must not be performed by unsupervised children.
- Keep children who are younger than eight years old away from the light.
- Do not allow children to play with the packaging material. Children may get caught in it when playing and suffocate.



### **WARNING!**

## **Battery hazards!**

Improper use of batteries may result in explosions or chemical burns caused by leaked battery acid.

- Never short circuit the batteries.
- Never dismantle the batteries.
- Never throw batteries into fire.
- Never expose batteries to excessive heat or direct sunlight.

- Never open batteries.
- The battery must be removed from the luminaire before it is scrapped.
- The battery is to be disposed of safely.
- Only use batteries of the same type.
- Ensure the correct polarity when inserting the batteries.
- Never use new and used batteries together.
- Change all batteries in a set at the same time.
- Do not charge any non-rechargeable batteries.
- Exhausted batteries are to be removed from the luminaire.
- Do not use Lithium type battery or rechargeable battery.
- Only touch leaky batteries with gloves. If you do come into contact with battery acid, wash the affected area thoroughly with plenty of clean water. If battery fluid which has leaked out comes into contact with your eyes or mucous membranes, you should also seek medical attention immediately.
- Keep batteries away from children.

### NOTICE!

#### Risk of damage!

Improper handling of the light may damage it.

- Place the light on an easily accessible, level, dry, heat-resistant and sufficiently stable work surface. Do not place the light on the edge or corner of the work surface.
- Never place the light on or near hot surfaces (e.g. stovetops etc.).
- Never expose the light to high temperatures (heaters etc.) or to the effects of the weather (rain etc.).
- Keep the light away from heat sources such as heaters, ovens and other heat-producing appliances, direct sunlight, dust and sharp edges.
- Never fill the light with liquid.
- Never attempt to clean the light by submerging it in water

and do not use a steam cleaner to clean it. Otherwise, the light could be damaged.

- Never place the light in the dishwasher. It would be destroyed as a result.
- Do not use the light if the plastic components of the light exhibit cracks or breaks or are deformed. Replace damaged parts only with compatible original spare parts.
- The use of accessories and device parts which are not expressly recommended by the manufacturer can cause damage and invalidate the warranty.

## First use

### Checking the light and product contents

#### NOTICE!

#### Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed objects, you may easily damage the light.

- Be very careful when opening the packaging.
  1. Take the light out of the packaging.
  2. Check to make sure that the delivery is complete (see **Fig. A**).
  3. Check whether the light or individual parts show signs of damage. If this is the case, do not use the light. Contact the manufacturer at the service address specified on the warranty card.

### Inserting or changing the batteries

1. In order to open the battery compartment cover **2**, rotate it away from the housing in an anti-clockwise direction (see **Fig. B**).
2. If applicable, remove the old batteries first.
3. Insert three 1.5 V batteries **—**, type AA/LR6 into the battery compartment. Make sure the polarity (+/-) of the batteries is correct.
4. Put the battery compartment cover back on the housing by turning it until tight in a clockwise direction.

## Use

### Switching the light on and off

1. To switch on the device, press the On/Off button **3** once. The light will be illuminated in 100% mode.
2. Push the On/Off button once again. The light will be illuminated in 50% mode.
3. Push the On/Off button a third time. The light will be illuminated in blink mode.
4. Push the On/Off button a fourth time. The light switches off.

### Folding and unfolding the lampshade

- In order to unfold the lampshade **4**, twist the upper cap **6** off the lower cap **5** in an anti-clockwise direction. The lampshade will unfold.
- In order to fold the lampshade up again, press the upper cap down onto the lower cap. Turn the upper cap in a clockwise direction on the lower cap in order to lock them both.

### Hanging up the light

You can hang up the light using the carrying handle **1** e.g. on a branch or rod.

- In order to hang it up, fold the carrying handle upwards. If necessary, the carrying handle can be opened at the hinge **7** (see **Fig. C**).

## Cleaning

### NOTICE!

### Risk of short circuit!

Water or other liquids that have penetrated the housing may cause a short circuit.

- Never immerse the light in water or other liquids.
- Make sure that no water or any other liquids get into the housing.

### NOTICE!

### Risk of damage!

Improper handling of the light may damage it.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as

- knives, hard scrapers and the like. They could damage the surfaces.
- Never place the light in the dishwasher. It would be destroyed as a result.
1. Remove the batteries from the light before cleaning it.
  2. Use a damp cloth to wipe off the light and if required, use a mild cleaning agent.
  3. Dry all parts well before using the light again or storing it.

## Storage

All parts must be completely dry before being stored.

- Always store the light in a dry, clean area.
- Protect the light from direct sunlight.
- Store the light in such a way that it is inaccessible to children.

## Technical data

Model:	WS-9918
Illuminant:	1x1W LED
Operating voltage:	4,5 V DC 
Batteries:	3 x AA/LR6; 1,5 V DC 
Luminous flux:	approx. 45 lm
Colour temperature:	6,500–7,000 K
Housing material:	ABS
Dimensions (Ø × H)	
unfolded:	approx. Ø 80 mm × 130 mm
folded:	approx. Ø 80 mm × 50 mm
Product code:	801121

## Declaration of Conformity



We, AHG Wachsmuth & Krogmann mbH, at Lange Mühren 1, 20095 Hamburg, Germany, declare under our sole responsibility that the above-mentioned product meets the basic requirements of the listed EU guidelines. The EU Declaration of Conformity can be requested from the manufacturer's address on the warranty card.



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



#### PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, AHERSTONE  
WARWICKSHIRE, CV9 2SH.

---

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.  
Visit us at [www.aldi.com](http://www.aldi.com)

WKNF8077

#### AFTER SALES SUPPORT

801121



GB

+4401909 517672

IE

+353 012475437



[aldi@0800repair.com](mailto:aldi@0800repair.com)

---

MODEL:  
WS-9918

06/2020

**3**  
YEAR  
WARRANTY