



User Manual





LED CAMPING LIGHT






Contents

- Overview 3**
- Use..... 4**
- Package contents/device parts..... 5**
- General information..... 6**
 - Reading and storing the user manual 6
 - Explanation of symbols 6
- Safety 7**
 - Proper use..... 7
 - Safety instructions..... 7
- First use..... 10**
 - Checking the light and package contents..... 10
 - Inserting or changing batteries 10
- Mounting 11**
 - Installation on a pole..... 11
 - Suspending the light..... 11
- Use..... 11**
 - Switching the light on and off 11
- Cleaning 11**
- Storage 12**
- Technical data 12**
- Declaration of Conformity..... 13**
- Disposal..... 13**
 - Disposing of the packaging 13
 - Disposing of the light 13



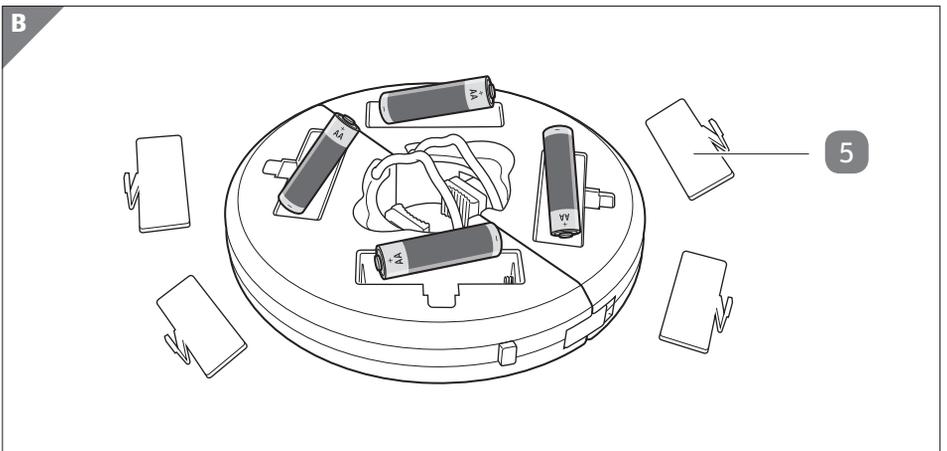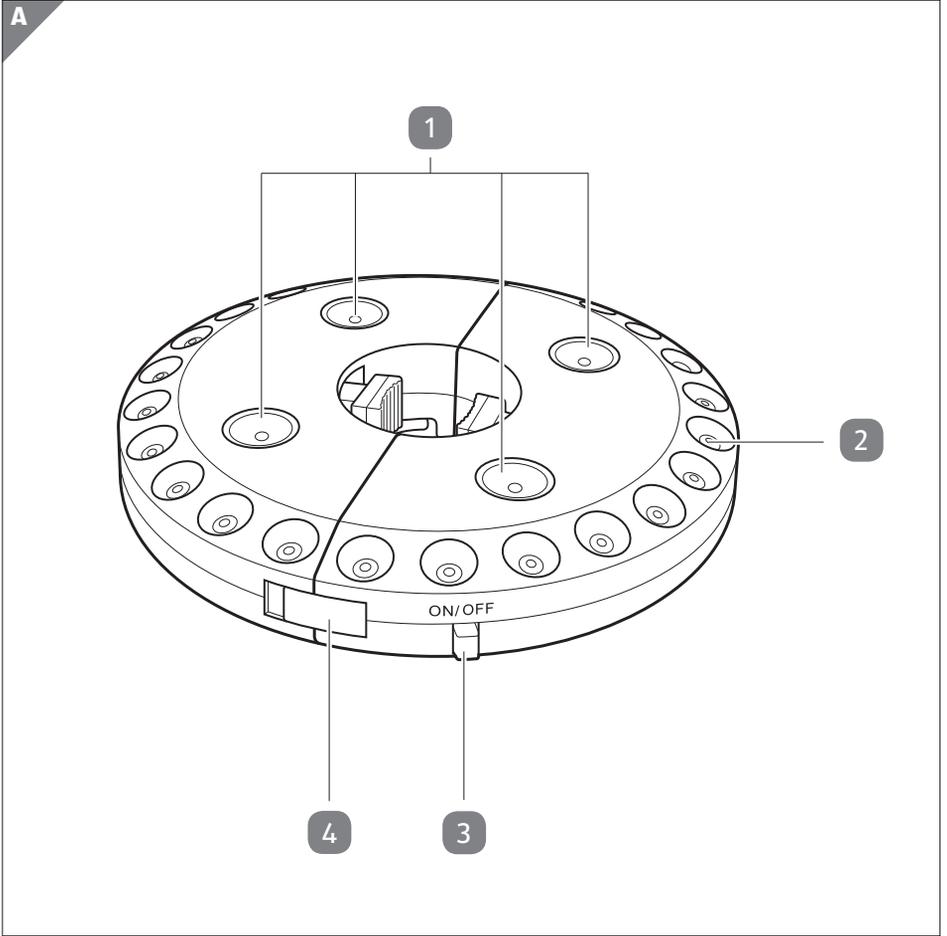

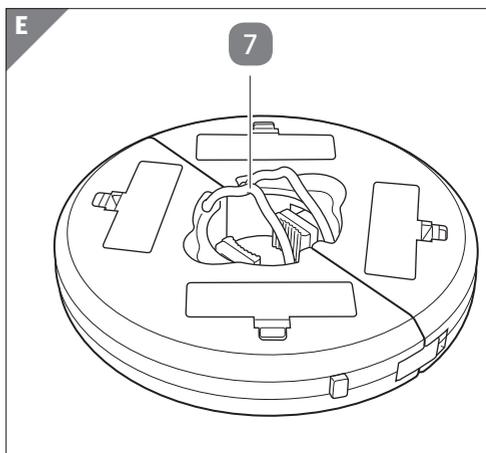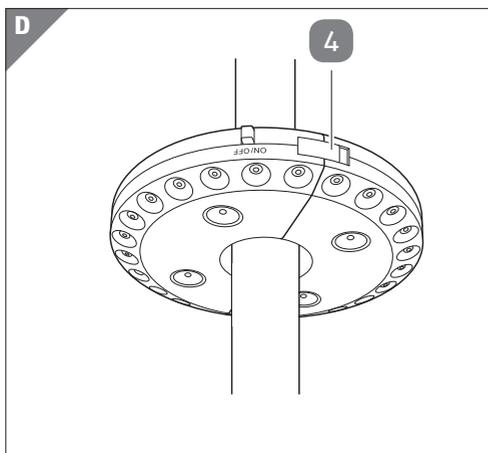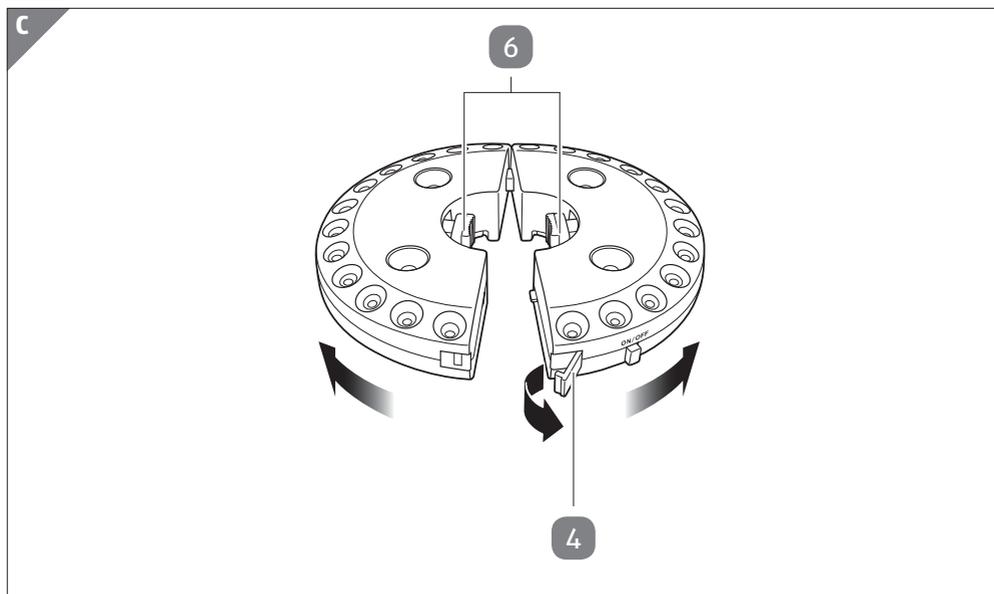

Declaration of Conformity



We, AHG Wachsmuth & Krogmann mbH, at Lange Mühren 1, 20095 Hamburg, Germany, declare under our sole responsibility that the above-mentioned product meets the basic requirements of the listed EU guidelines. The EU Declaration of Conformity can be requested from the manufacturer's address on the warranty card.

Disposal

Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of paperboard and cardboard with waste paper and plastics with recyclable waste.

Disposing of the light

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



Old devices must not be disposed of with household waste!

If at some point it is no longer possible to use the light, all consumers are **required by law to dispose of old devices separately from their household waste**, for example, at a collection point in their municipality/ borough. This ensures that old appliances are recycled properly and helps prevent any negative impact on the environment. For this reason, electrical equipment is marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Dispose of the light (including the battery) at your collection point in a discharged state only!

*labelled with: Cd = cadmium, Hg = mercury, Pb = lead

Package contents / device parts

- 1 Light ring 1 (4 LEDs)
- 2 Light ring 2 (24 LEDs)
- 3 On/Off switch
- 4 Locking mechanism
- 5 Battery compartment cover, 4 x
- 6 Clamp
- 7 Hanging loops, 2 x

The package contents include four type LR6 (AA) 1.5 V batteries.

General information

Reading and storing the user manual



This user manual accompanies this LED camping light (referred to below simply as the 'light'). It contains important information about start-up and handling.

Before using the light, please read through the user manual carefully.

This particularly applies to the safety instructions. Failure to observe this user manual may result in severe injury or damage to the light.

The user manual is based on the standards and regulations in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Keep the user manual for future reference. If you pass the light on to third parties, make sure to include this user manual.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the light or on the packaging.



This signal symbol/word designates a hazard with a moderate degree of risk which may lead to death or severe injury if not avoided.



This signal word warns against potential damages to property.



This symbol provides you with useful supplementary information on assembly or use.



This symbol indicates that the product is rated as a Class III appliance.



WARNING – RISK OF SUFFOCATION!



Declaration of Conformity (see 'Declaration of Conformity' section):
Products marked with this symbol meet all applicable Community regulations for the European Economic Area.

Safety

Proper use

The light is designed only for use as a light source for camping. It is only intended for private use and is not suitable for commercial purposes. This light is used for accent lighting and is not suitable for room lighting in the home.

Only use the light as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury. The light is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

The bulbs on this light are not replaceable. When the bulbs have reached their end of life, the entire light has to be replaced.

Safety instructions



Risk of injury!

Handling the light improperly may result in injury.

- Do not look into the light for prolonged periods of time when it is in operation, as this may be harmful to your eyes.
- Do not leave the light unattended while it is in use.



Risk of electric shock!

Improper handling of the light may cause electric shocks.

- Do not use the light if it exhibits visible damage.
- Do not open the casing by yourself; have a qualified professional carry out any repairs. Contact a qualified workshop for this. Liability and warranty claims are waived in the event of repairs performed by the user or incorrect operation.
- Only parts that comply with the device's original specifications may be used for repairs. This light contains electrical and mechanical parts which are essential for providing protection against sources of danger.

- Use the device only when it is fully assembled.
- Do not stick any foreign objects onto the light or cover it.
- Never place any objects with open flames (e.g. candles) or liquid-filled items (e.g. coffee mugs) on or near to the light.
- Keep the light away from open fire and hot surfaces.
- Never store the light such that there is a risk of it falling into a tub or sink.
- Always switch the light off when you are not using it, are cleaning it or in the event of a fault.



WARNING!

- This light can be used by children aged eight years and above and by persons with reduced physical, sensory, or mental capacities, or lack of experience and knowledge if they are supervised or have been instructed in the safe use of the light and understand the hazards involved. Children must not play with the light. Cleaning and user maintenance must not be performed by unsupervised children.
- Keep children under eight years of age away from the light.
- Do not allow children to play with the packaging material. Children may get caught in it when playing and suffocate.



WARNING!

Battery hazards!

Improper use of batteries may result in explosions or chemical burns caused by leaked battery acid.

- Never short circuit the batteries.
- Never dismantle the batteries.
- Never throw batteries into fire.
- Never expose batteries to excessive heat or direct sunlight.
- Never open batteries.

-
- Only use batteries of the same type.
 - Ensure the correct polarity when inserting the batteries.
 - Never use new and used batteries together.
 - The battery must be removed from the luminaire before it is scrapped.
 - The battery is to be disposed of safely.
 - Change all batteries in a set at the same time.
 - Do not charge any non-rechargeable batteries.
 - Exhausted batteries are to be removed from the luminaire. Do not use Lithium type battery or rechargeable battery.
 - Always wear gloves when handling leaky batteries. If you happen to come into contact with battery acid, wash the affected area thoroughly with plenty of clean water. If battery fluid comes into contact with your eyes or mucous membranes, you should also seek medical attention immediately.
 - Keep batteries away from children.

NOTICE!

Risk of damage!

Improper handling of the light may result in damage to it.

- Never place the light on or near hot surfaces (e.g. cooktops).
- Never expose the light to high temperatures (e.g. heaters) or to the effects of weather (e.g. rain).
- Keep the light away from heat (e.g. radiators, ovens and other heat-generating appliances), direct sunlight, dust and sharp edges.
- Never fill the light with liquid.
- Never attempt to clean the light by immersing it in water and do not use a steam cleaner to clean it. Otherwise, you may damage the light.
- Never place the light in a dishwasher as this will destroy it.

- Stop using the light if its plastic parts or the light itself show cracks or breaks or are deformed. Replace damaged parts only with compatible original spare parts.
- The use of accessories and parts not expressly recommended by the manufacturer may cause injury or damage and will void the warranty.

First use

Checking the light and package contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed objects, you may easily damage the light.

- Open the packaging with great care.

1. Take the light out of the packaging.
2. Check to make sure that all contents have been delivered (see **Fig. A**).
3. Check whether the light or its components show signs of damage. If this is the case, do not use the light. Contact the manufacturer at the service address specified on the warranty card.

Inserting or changing batteries

1. Open the 4 battery compartment covers **5** on the rear of the light and remove any old batteries first (see **Fig. B**).
2. Insert one 1.5 V  AA/LR6 battery in each compartment. Make sure the polarity (+/-) is correct. The battery's negative pole must be pushing on the respective spring contact.
3. Put the battery compartment covers back on.

Mounting

The light can be mounted in two ways:

- Installed on a vertical pole, for example, of a parasol
- Suspended using the hanging loops

Installation on a pole

1. Release the locking mechanism **4** by folding it upwards (see **Fig. C**).
2. Unfold the light and place the two halves around the pole. The light is compatible with pole diameters of 25 to 45 mm.
3. Push the two halves together and secure them in place using the locking mechanism. The spring clamp **6** will hold the light securely on the pole (see **Fig. D**).

The light can be installed in either directions, with the LEDs facing upwards (indirect lighting) or downwards (direct lighting).

Suspending the light

- To mount the light this way, fold up the two hanging loops **7** and hang the light on a hook or by a string (see **Fig. E**).

Use

Switching the light on and off

1. Press the On/Off switch **3** once to switch the light on.
The bulbs in light ring 1 (4 LEDs) **1** will light up.
2. Press the On/Off switch again. The bulbs in light ring 2 (24 LEDs) **2** will light up.
3. Press the On/Off switch for a third time. All LEDs will light up.
4. Press the On/Off switch for a fourth time. This will turn off the light.

Cleaning

NOTICE!

Risk of short circuit!

Water or other liquids that have penetrated the housing may cause a short circuit.

- Never immerse the light in water or other liquids.
- Make sure that no water or any other liquids enter the casing.

NOTICE!

Risk of damage!

Improper handling of the light may result in damage to it.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.
- Never place the light in a dishwasher as this will destroy it.
 1. Remove the batteries from the light before cleaning it.
 2. Wipe down the light using a damp cloth; use a mild detergent if necessary.
 3. Dry all parts thoroughly before storing the light or using it again.

Storage

All parts must be completely dry before being stored.

- Always store the light in a clean, dry place.
- Protect the light from direct sunlight.
- Store the light out of children's reach.

Technical data

Model:	WS-9821s-W (white) / WS-9821s-S (black)
Illuminant:	28 LED
Operating voltage:	6 V DC 
Batteries:	4 x LR6/AA; 1.5 V DC 
Power consumption:	Max. 5.6 W
Pole diameter (min.–max.):	25–45 mm
Luminous flux:	Approx. 220 lm
Colour temperature:	Max. 6,500 K
Case material:	ABS
Dimensions (Ø × H):	approx. 160 x 25 mm
Product code:	801121



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com

WKNF8077

AFTER SALES SUPPORT

801121



GB

+4401909 517672

IE

+353 012475437



aldi@0800repair.com

MODEL:

WS-9821s-W / WS-9821s-S

06/2020

3
YEAR
WARRANTY