




USER MANUAL

ICICLE LIGHTS 250

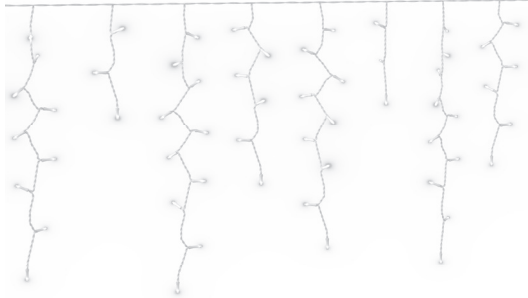

AFTER SALES SUPPORT **677904** (W)

AU **1 800 898 750**
SERVICE@WKFE.COM.HK

MODEL: 1336-B; 1336-CW **10/2025**

1
YEAR WARRANTY

V06/0625

MADE IN CHINA

DISTRIBUTED BY
ALDI STORES
1 SARCENTS ROAD,
MINCHINGBURY NSW 2770
WWW.ALDI.COM.AU

CASA LIFE® is a registered trademark of ALDI Stores.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store, within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on setup and use.

Read the manual carefully (especially refer to chapter **Safety**) before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

2 SAFETY

2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.



» This signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in property damage.



» This signal word is a preferred signal word to address tips and practices not related to personal injury.

2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Only use the product in dry indoor areas (adapter only).

IP20

Protection against ingress of solid objects of ≥ 12.5 mm. No protection against water (adapter only).



A Class II or double insulated electrical product uses reinforced protective insulation in addition to basic insulation. It has been designed in such a way that it does not require a safety connection to electrical earth (ground) (adapter only).



Safety isolating adapter, short-circuit proof.

1



Independent lighting auxiliary.

tc=75°C

Maximum operating temperature of adapter.



Direct current (DC)



Alternating current (AC)

IP44

Protection against ingress of solid objects of ≥ 1 mm and against water splashes from all sides (light chain only).



A Class III electrical product operates with a safe voltage range (light chain only).



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Ta

Ambient temperature

2.3 GENERAL SAFETY INSTRUCTIONS



- » Do not use the product if light sources are missing or damaged. Dispose of the product immediately.
- » Do not use the product without all gaskets in place.

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep children under close supervision when using the product around them.
- The external flexible cable of this product cannot be replaced (Type Z); if the cable is damaged, the product shall be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product shall be replaced.
- Do not connect the product to an outlet while it is in the packaging.
- Do not connect this product electrically to another product.
- Do not immerse the product in water or other liquids.
- Only use the light chain with the provided adapter.
- The light chain is IP44 (not including adapter) and suitable for indoor and outdoor use. It should not be immersed in water or exposed to water jets (e.g. pressure washers). The supplied adapter is IP20 and suitable for indoors use only.

2.4 ADDITIONAL SAFETY INSTRUCTIONS



- » Never retrieve an electrical product that has fallen into water. In such cases, immediately remove the adapter from the outlet.



- » Never use a damaged product or a product that has been dropped! In such cases, immediately remove the adapter from the outlet. Then contact the retailer's service centre to have the product checked or repaired.

2

CAUTION! TRIP HAZARD!

- » Lay the cable in such a way that it cannot be pulled on or tripped over unintentionally.

CAUTION! RISK OF DAMAGE!

- » To avoid damaging the cable, do not squeeze, bend or drag it over sharp edges. Keep the cable and the product away from hot surfaces and open flames.
- Before connecting the product to an outlet, make sure that the voltage specified on the rating plate of the product matches the mains voltage in your home. If this is not the case, contact your retailer and do not use the product.
- Never attempt to repair the product yourself. In the case of a fault, only have the product repaired by a qualified specialist.
- The product is not intended for operation with an external clock timer or a separate remote control system.
- Connect the adapter into an easily accessible outlet to ensure it can be disconnected quickly in case of an emergency.
- Do not operate the product with wet hands or while standing on a wet floor. Do not touch the adapter with wet hands.
- Always switch the product off before disconnecting the adapter from the outlet.
- Do not use the product near water or other liquids.

2.5 INTENDED USE

- This product is intended for decoration only. It is not suitable for indoor illumination.
- This product is only intended for household use and not suitable for commercial use.
- This product is not suitable for permanent installation or operation.
- The adapter is intended for dry indoor use only. The light chain is intended for indoor and outdoor use.
- Only use the product as mentioned in this manual. Any other use is considered improper and may result in damage to property or injury to persons.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

3 PACKAGE CONTENT

1× Light chain 1× Adapter

4 BEFORE FIRST USE

⚠ WARNING! RISK OF SUFFOCATION!

- » Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. they could suffocate or swallow small parts.

CAUTION! RISK OF DAMAGE!

- » Be cautious not to damage the product when opening the packaging. Avoid the use of sharp objects.

1. Take the product out of the packaging.
2. Remove all packaging materials.
3. Check that the delivery is complete.
4. Check whether the product or individual parts are damaged. If this is the case, do not use the product. Contact the after sales support using the contact points provided on the cover page of this manual.

3

7 TECHNICAL DATA

7.1 LIGHT CHAIN

Model:	1336-B; 1336-CW	Dimensions	
Power input:	31V $\overline{=}$, 6W	Light chain:	4.9 x 0.51 m
Number of modes:	8 (with memory function)	Cable:	6 m
Timer function:	Yes	Protection class:	III
	250 LEDs (non-replaceable)	IP rating:	IP44
Light source:	1336-B: Blue 1336-CW: Cold White	Article number:	677904

7.2 ADAPTER

Model:	GP-SW310DC0193(AU)-1CT	Protection class:	II
Power supply:	220–240 V~, 50/60 Hz, 0.12 A50-A	IP rating:	IP20
Power output:	31V $\overline{=}$, 6W		

8 DISPOSAL INSTRUCTIONS

8.1 DISPOSING OF THE PACKAGING



The product has been packaged to protect it from damage in transit. Packaging materials are raw materials and can therefore be reused or recycled.

8.2 DISPOSING OF THE PRODUCT



Dispose of the product in accordance with the applicable laws and regulations for your country.

9 WARRANTY

9.1 WARRANTY CERTIFICATE

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, ALDI will provide you with a warranty against defects as follows: The product is guaranteed to be free from defects in workmanship and parts for a period of 1 year (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

9.1.1 PROOF OF PURCHASE

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

5

5 USE

CAUTION! RISK OF DAMAGE!

- » Do not secure the product using staples, nails, wires or similar materials, which could damage the product and/or cable. Do not drill through or cut the product.
- » Use plastic cable ties or other light fixings to secure the light chain in position.

i NOTICE

- » The product is equipped with a memory function. The last mode used before disconnecting the product from the outlet will be the mode used when the product is connected back to the outlet.
- » A minimum of 5 supports per metre must be used to support the weight of the light chain and avoid putting strain on the cable.

5.1 USING THE PRODUCT

1. Position the light chain.
2. Connect the plug of the light chain to the adapter. Make sure the gasket is in place.
3. Connect the adapter to a suitable outlet.
4. Press the button on the adapter to switch on the product. The first mode is active. Press the button again to change to the next mode. The product has 8 modes.
COMB -> IN WAVES -> SEQUENTIAL -> SLO-GLO -> CHASING/FLASH -> SLOW FADE -> TWINKLE/FLASH -> STEADY ON
5. To switch off the product, disconnect the adapter from the outlet.

5.2 TIMER FUNCTION

1. Press and hold the button on the adapter to activate the timer. The timer function indicator in the button lights up. The product activates the 6 hours on, 18 hours off timer. The mode can be changed while the timer function is activated, however once the product is switched off, the timer function is also switched off.
2. Press and hold the button again to deactivate the timer. The timer function indicator switches off.

6 CLEANING AND CARE

6.1 CLEANING

⚠ WARNING! RISK OF ELECTRIC SHOCK!

- » Disconnect the product from the outlet before cleaning.
- » During cleaning, do not immerse the product in water or other liquids. Never hold the product under running water.

CAUTION! RISK OF DAMAGE!

- » Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. These could damage the surfaces of the product.

1. Wipe the product clean with a damp cloth. Apply a small amount of mild detergent for stubborn dirt as needed.
2. Let all parts dry completely.

6.2 STORAGE

- Before storing the product, clean all parts of the product (refer to chapter **CLEANING**).
- Dry the product completely before storage.
- Always store the product in a dry and cool place, at an ambient room temperature.
- Store the product out of reach of children and pets.

4

9.1.2 EXTENT OF WARRANTY

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

9.1.3 NORMAL WEAR AND TEAR

This warranty does not cover normal wear and tear to the products or parts.

9.1.4 EXCLUSIONS

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

9.1.5 TO MAKE A CLAIM

This warranty against defects is provided by:

ALDI Stores, Locked Bag 56, St Marys Delivery Centre, NSW 2760, Phone (02) 9675 9000.

If a defect in the goods appears within 1 year (the identified period on the packaging), you are entitled to claim a warranty, please contact or send all warranty claims to:

Install + Fix Solutions, Unit 1, 9 Kingsbury Street, Brendale, QLD 4500, AUSTRALIA

Tel: 1 800 898 750 (Mon-Fri, 8:30 am–6:00 pm AEST)

service@wkfe.com.hk

When making a return, please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

9.2 WARRANTY DETAILS

The product is guaranteed to be free from defects in workmanship and parts for a period of 1 year from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

9.3 REPAIR AND REFURBISHED GOODS OR PARTS NOTICE

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 800 898 750 or write to us at:

Install + Fix Solutions, Unit 1, 9 Kingsbury Street, Brendale, QLD 4500, AUSTRALIA

(Mon-Fri, 8:30 am–6:00 pm AEST)

service@wkfe.com.hk

6