


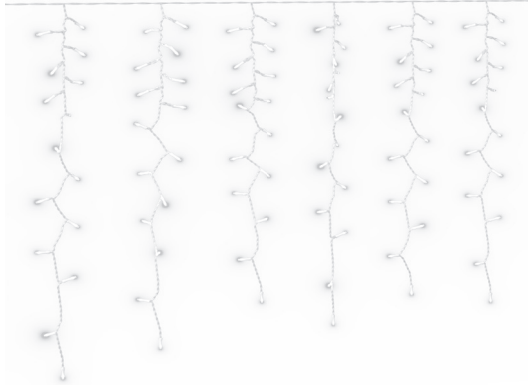

USER MANUAL

LED SOLAR CURTAIN LIGHTS 150



AFTER SALES SUPPORT 677821 ^{W1}

AU 1 800 898 750
SERVICE@WKFE.COM.HK

MODEL: 1331-CWM; 1331-CWC 10/2025

1
YEAR WARRANTY

V06/0625

MADE IN CHINA

DISTRIBUTED BY
ALDI STORES
1 SARCENTS ROAD,
MINDENHURST NSW 2770
WWW.ALDI.COM.AU

CASA LIFE® is a registered trademark of ALDI Stores.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store, within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on setup and use.

Read the manual carefully (especially refer to chapter **Safety**) before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

2 SAFETY

2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.



» This signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in property damage.



» This signal word is a preferred signal word to address tips and practices not related to personal injury.

2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Direct current (DC)



Protection against ingress of solid objects of ≥ 1 mm and against water splashes from all sides.



A Class III electrical product operates with a safe voltage range.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.



Ambient temperature

1

2.3 GENERAL SAFETY INSTRUCTIONS



- » Do not use the product if light sources are missing or damaged. Dispose of the product immediately.
- » Do not use the product without all gaskets in place.

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep children under close supervision when using the product around them.
- The external flexible cable of this product cannot be replaced (Type Z); if the cable is damaged, the product shall be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product shall be replaced.
- Do not switch on the product while it is in the packaging.
- Do not connect this product electrically to another product.
- Do not immerse the product in water or other liquids.

2.4 ADDITIONAL SAFETY INSTRUCTIONS



- » Lay the cable in such a way that it cannot be pulled on or tripped over unintentionally.



- » To avoid damaging the cable, do not squeeze, bend or drag it over sharp edges. Keep the cable and the product away from hot surfaces and open flames.

- Never attempt to repair the product yourself. In the case of a fault, only have the product repaired by a qualified specialist.
- Do not operate the product if it is visibly damaged.
- Do not operate the product with wet hands or while standing on a wet floor.
- Do not use the product near water or other liquids.

2.5 BATTERY SAFETY INSTRUCTIONS



- » Do not expose the battery or the product to fire or excessive temperature. Exposure to fire or temperatures above 130 °C may cause explosion.



- » Charge the product before storage.



- » In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- » Do not disassemble or short-circuit the battery/rechargeable battery.

2.6 INTENDED USE

- This product is intended for decoration only. It is not suitable for indoor illumination.

2

- This product is only intended for household use and not suitable for commercial use.
- This product is not suitable for permanent installation or operation.
- The product is intended for indoor and outdoor use.
- Only use the product as mentioned in this manual. Any other use is considered improper and may result in damage to property or injury to persons.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

3 PACKAGE CONTENT

- | | |
|------------------------|---|
| 1x Light chain | 1x Solar panel with battery compartment |
| 1x Solar panel support | 1x Stake |

4 BEFORE FIRST USE

WARNING! RISK OF SUFFOCATION!

- » Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. they could suffocate or swallow small parts.

CAUTION! RISK OF DAMAGE!

- » Be cautious not to damage the product when opening the packaging. Avoid the use of sharp objects.

1. Take the product out of the packaging.
2. Remove all packaging materials.
3. Check that the delivery is complete.
4. Check whether the product or individual parts are damaged. If this is the case, do not use the product. Contact the after sales support using the contact points provided on the cover page of this manual.

5 USE

CAUTION! RISK OF DAMAGE!

- » Do not secure the product using staples, nails, wires or similar materials, which could damage the product and/or cable. Do not drill through or cut the product.
- » Use plastic cable ties or other light fixings to secure the light chain in position.

NOTICE

- » The product is equipped with a memory function. The last mode used before switching off the product, will be the mode used when the product is switched on.
- » A minimum of 5 supports per metre must be used to support the weight of the light chain and avoid putting strain on the cable.
- » The product is equipped with a light sensor. The light chain will only switch on once the ambient light is below its threshold.

5.1 USING THE PRODUCT

1. Connect the stake to the pole.
2. Slide the solar panel onto the pole.
3. Place the solar panel in a sunny location, so the built-in batteries can be charged for use.
4. Press the **ON/OFF** button on the back of the solar panel to switch on the product. The first mode is active. Press the **MODE** button to change to the next mode. The product has 8 modes.
COMBINATION -> IN WAVE -> SEQUENTIAL -> SLO-GLO -> CHASING/FLASH -> SLOW FADE -> TWINKLE/FLASH -> STEADY ON
5. To switch off the product, press the **ON/OFF** button on the back of the solar panel.

3

8 DISPOSAL INSTRUCTIONS

8.1 DISPOSING OF THE PACKAGING



The product has been packaged to protect it from damage in transit. Packaging materials are raw materials and can therefore be reused or recycled.

8.2 DISPOSING OF THE PRODUCT



Dispose of the product in accordance with the applicable laws and regulations for your country.

8.3 DISPOSING OF THE BATTERIES



Batteries may not be disposed of with household waste!

As the end user, you are required by law to bring all batteries and rechargeable batteries, regardless of whether they contain harmful substances* or not, to a collection point run by the city or county or to a retailer so that they can be disposed of in an environmentally friendly manner.

* Labeled with: Cd = cadmium, Hg = mercury, Pb = lead

The return of batteries and accumulators is free of charge.

9 WARRANTY

9.1 WARRANTY CERTIFICATE

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, ALDI will provide you with a warranty against defects as follows: The product is guaranteed to be free from defects in workmanship and parts for a period of 1 year (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

9.1.1 PROOF OF PURCHASE

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

9.1.2 EXTENT OF WARRANTY

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

9.1.3 NORMAL WEAR AND TEAR

This warranty does not cover normal wear and tear to the products or parts.

5

6 CLEANING AND CARE

6.1 CLEANING



WARNING! RISK OF ELECTRIC SHOCK!

- » During cleaning, do not immerse the product, the cord or its plug in water or other liquids. Never hold the product under running water.

CAUTION! RISK OF DAMAGE!

- » Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. These could damage the surfaces of the product.

1. Wipe the product clean with a damp cloth. Apply a small amount of mild detergent for stubborn dirt as needed.
2. Let all parts dry completely.

6.2 STORAGE

- Before storing the product, clean all parts of the product (refer to chapter **CLEANING**).
- Dry the product completely before storage.
- Always store the product in a dry and cool place, at an ambient room temperature.
- Store the product out of reach of children and pets.

7 TECHNICAL DATA

Model:	1331-CWM	1331-CWC
Solar panel:	2 V ≈, 150 mA	2 V ≈, 150 mA
Battery:	1x 1.2 V ≈, 600 mAh, Type: AA (non-replaceable)	1x 1.2 V ≈, 600 mAh, Type: AA (non-replaceable)
Number of modes:	8 (with memory function)	8 (with memory function)
Light source:	150 LEDs (non-replaceable) Multicolour	150 LEDs (non-replaceable) Cold white
Dimensions Light chain: Cable:	1.35 x 1.5 m 6 m	1.35 x 1.5 m 6 m
Protection class:	III	III
Max. operation ambient temperature (Ta):	45 °C	45 °C
IP rating:	IP44	IP44
Article number:	677821	677821

4

9.1.4 EXCLUSIONS

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

9.1.5 TO MAKE A CLAIM

This warranty against defects is provided by:

ALDI Stores, Locked Bag 56, St Marys Delivery Centre, NSW 2760, Phone (02) 9675 9000.

If a defect in the goods appears within 1 year (the identified period on the packaging), you are entitled to claim a warranty, please contact or send all warranty claims to:

Install + Fix Solutions, Unit 1, 9 Kingsbury Street, Brendale, QLD 4500, AUSTRALIA

Tel: 1 800 898 750 (Mon-Fri, 8:30 am–6:00 pm AEST)

service@wkfe.com.hk

When making a return, please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

9.2 WARRANTY DETAILS

The product is guaranteed to be free from defects in workmanship and parts for a period of 1 year from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

9.3 REPAIR AND REFURBISHED GOODS OR PARTS NOTICE

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 800 898 750 or write to us at:

Install + Fix Solutions, Unit 1, 9 Kingsbury Street, Brendale, QLD 4500, AUSTRALIA

(Mon-Fri, 8:30 am–6:00 pm AEST)

service@wkfe.com.hk

6