



User Manual

LED PATHLIGHTS ASSORTMENT

PERFECT CHRISTMAS



AFTER SALES SUPPORT

852824

GB +44(0)1909517672 IE +353(0)12475437
ALDI@0800REPAIR.COM

Model: 1328-RC, 1328-MC,
1328-CM, 1328-SI, 1328-SF

10/2025

3
YEAR
WARRANTY

V01/0725

MADE IN CHINA

PRODUCED IN CHINA FOR
ALDI STORES LTD.
PO BOX 26,
ATHLONE,
WICKLOW,
IRELAND
CV9 2SH
ALDI STORES (IRELAND) LTD.
PO BOX 726,
NAAS,
CO. KILDARE
VISIT US AT WWW.ALDI.COM



1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on setup and use. Read this manual carefully, especially the chapter safety, before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

1.1 INTENDED USE

- This product is intended for decoration only. It is not suitable for indoor illumination.
- This product is only intended for household use and not suitable for commercial use.
- This product is not suitable for permanent installation or operation.
- The product is intended for outdoor use.
- Only use the product as mentioned in this manual. Any other use is considered improper and may result in damage to property or injury to persons.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

2 SAFETY

2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.

⚠ WARNING!

- » This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION!

- » This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION!

- » This signal word indicates a hazardous situation which, if not avoided, could result in property damage.

i NOTICE

- » This signal word is a preferred signal word to address tips and practices not related to personal injury.

1

2.4 ADDITIONAL SAFETY INSTRUCTIONS

⚠ CAUTION! TRIP HAZARD!

- » Lay the power cord in such a way that it cannot be pulled on or tripped over unintentionally.

CAUTION! RISK OF DAMAGE!

- » To avoid damaging the power cord, do not squeeze, bend or drag it over sharp edges. Keep the power cord and the product away from hot surfaces and open flames.

- Never attempt to repair the product yourself. In the case of a fault, only have the product repaired by a qualified specialist.
- Do not operate the product if it is visibly damaged.
- Do not operate the product with wet hands or while standing on a wet floor.
- Do not use the product near water or other liquids..

2.5 BATTERY SAFETY INSTRUCTIONS

⚠ WARNING! RISK OF INJURY!

- » Mishandling of the supplied batteries may cause gas leakage, electrolyte (battery fluid) leakage, fire or explosion.

- Do not short-circuit the batteries.
- To avoid short circuits, store unpacked batteries so that the battery contacts do not touch one another. Ideally store the batteries in their original packaging.
- Keep unpacked batteries away from metal objects to avoid short circuits.
- Do not take the batteries apart.
- Do not modify the batteries in any way.
- Do not crush, deform or drill the batteries.
- Do not throw the batteries into an open fire.
- Do not heat the batteries or carry out welding or soldering directly next to them.
- Stop using the batteries if they are damaged.
- Do not attempt to charge the batteries.
- Avoid over-discharging the batteries.
- Always change the entire set of batteries. Never mix old and new batteries or batteries with different charges.
- Only replace the batteries with the same or an equivalent battery type.
- When inserting batteries, ensure that the battery polarity is correct (positive (+) and negative (-)).
- Remove empty batteries from the LED path light.
- Rechargeable batteries must be removed from the LED path light before charging.

⚠ WARNING! RISK TO HEALTH AND SUFFOCATION HAZARD!

- » Swallowing batteries can cause suffocation. It may also cause poisoning or internal burns if a battery which has been swallowed then leaks.

- Do not allow children to play with the batteries.
- Only allow children to change the batteries under supervision.
- Keep batteries out of reach of children.
- Immediately consult a doctor if a battery has been swallowed.

4

2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Direct current (DC)

IP44

Protection against ingress of solid objects of Ø ≥1 mm and against water splashes from all sides.



A Class III electrical product operates with a safe voltage range.



Packaging made of FSC certified wood mix



Declaration of conformity (see chapter "Declaration of conformity"):
Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.



Declaration of conformity (see chapter "Declaration of conformity"):
Products marked with this symbol meet all applicable Community regulations of the United Kingdom.



Keep out of the reach of children



Do not recharge



Do not expose to mechanical stress



Do not disassemble



Do not dispose of in fire

2

⚠ CAUTION! RISK OF INJURY!

- » In case of malfunction or damage, electrolyte (battery fluid) may leak from the batteries, which can cause burns if touched.

- Do not touch leaky batteries.
- Avoid all contact with leaked electrolyte.
- Should contact with leaked electrolyte occur, wipe the area with clean water immediately.
- Immediately consult a doctor if leaked electrolyte comes into contact with eyes.

i NOTICE! RISK OF DAMAGE!

- » If discharged batteries remain in an appliance for too long, electrolyte may leak out, causing damage to the appliance.
- Remove depleted batteries from the LED pathlight and dispose of them according to the applicable legal requirements.

i NOTICE! RISK OF DAMAGE!

- » Improper storage can damage the batteries.

- Remove batteries from the LED pathlight if it is not going to be used for an extended period of time.
- Store the batteries in a cool, dry place.

3 PACKAGE CONTENT

1328-RC

• 4x Path Lights
• 4x Garden Stake
• 1x Battery Pack
• 3x AA Batteries
• 1x Instruction Manual
incl. 1x Warranty Card

1328-MC

• 4x Path Lights
• 4x Garden Stake
• 1x Battery Pack
• 3x AA Batteries
• 1x Instruction Manual
incl. 1x Warranty Card

1328-CM

• 8x Path Lights
• 8x Garden Stake
• 1x Battery Pack
• 3x AA Batteries
• 1x Instruction Manual
incl. 1x Warranty Card

1328-ST

• 4x Path Lights
• 4x Garden Stake
• 1x Battery Pack
• 3x AA Batteries
• 1x Instruction Manual
incl. 1x Warranty Card

1328-SF

• 4x Path Lights
• 4x Garden Stake
• 1x Battery Pack
• 3x AA Batteries
• 1x Instruction Manual
incl. 1x Warranty Card

4 BEFORE FIRST USE

⚠ WARNING! RISK OF SUFFOCATION!

- » Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. they could suffocate or swallow small parts.

CAUTION! RISK OF DAMAGE!

- » Be cautious when opening the packaging not to damage the product. Avoid the use of sharp objects.

- Take the product out of the packaging.
- Remove the packaging materials.
- Check that the delivery is complete.
- Check whether the product or individual parts are damaged. If this is the case, do not use the product. Contact the after sales support using the contact points provided on the cover page of this manual.

5

3

5 Use

CAUTION! RISK OF DAMAGE!

- » Do not secure the product using staples, nails, wires or similar materials, which could damage the product and/or power cord. Do not drill through or cut the product.
- » Use plastic cable ties or other light fixings to secure the light chain in position.

i NOTICE

- » The product is equipped with a memory function. The last mode use before switching off the product from will be the mode used when the product is switched on.
- » The product is equipped with a light sensor. The light chain will only switch on once the ambient light is below its threshold.

5.1 USING THE PRODUCT

- Open the battery cover. Insert the supplied LR6 batteries into the corresponding slots in the battery compartment. Make sure the polarity is correct (+/-). Close the battery compartment.
- Press the ON/OFF button on the battery panel to switch on the product. The first mode is active and activate the timer at the same time.. Press the MODE button to change to the next mode. The product has 8 modes.
- COMBINATION -> IN WAVE -> SEQUENTIAL -> SLO-GLO -> CHASING/FLASH -> SLOW FADE -> TWINKLE/FLASH -> STEADY ON
- To switch off the product, press the ON/OFF button of the battery panel.

5.2 REPLACING THE BATTERIES

- Open the battery cover.
- Remove the old battery and replace them with 3 batteries of the same type and same specifications. Make sure to observe the correct polarity (+/-).
- Close the battery cover.

5.3 TIMER FUNCTION

- The battery panel has an automatic timer function. After switching on, the battery panel shines for 8 hours. It then switches off automatically and switches back on again after 16 hours.

5.4 CLEANING

⚠ WARNING! RISK OF ELECTRIC SHOCK!

- » During cleaning, do not immerse the product, the cord or its plug in water or other liquids. Never hold the product under running water.

CAUTION! RISK OF DAMAGE!

- » Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. These could damage the surfaces of the product.

- Wipe the product clean with a damp cloth. Apply a small amount of mild detergent for stubborn dirt as needed.
- Let all parts dry completely.

6

