




# USER MANUAL

## LED LIGHT NET OR CURTAIN 150

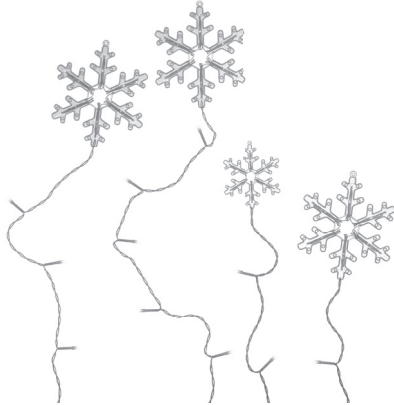

PERFECT  
CHRISTMAS

|                     |                     |                    |
|---------------------|---------------------|--------------------|
| AFTER SALES SUPPORT |                     | 853838             |
|                     | GB +44(0)1909517672 | IE +353(0)12475437 |
|                     | ALDI@0800REPAIR.COM |                    |
| MODEL: 1331-SFTB    |                     | 10/2025            |

1  
YEAR WARRANTY

V05/0625

MADE IN CHINA

Produced in  
China for  
ALDI Stores Ltd.  
PO Box 26,  
Atherstone,  
Warwickshire,  
CV9 2SH  
ALDI Stores (Ireland) Ltd.  
PO Box 726,  
NAAS,  
CO. KILDARE  
Visit us at WWW.ALDI.COM

### 1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on setup and use.

Read the manual carefully (especially refer to chapter **Safety**) before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

### 2 SAFETY

#### 2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.



» This signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



» This signal word indicates a hazardous situation which, if not avoided, could result in property damage.



» This signal word is a preferred signal word to address tips and practices not related to personal injury.

#### 2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Only use the product in dry indoor areas (adapter only).

IP20

Protection against ingress of solid objects of  $\varnothing \geq 12.5$  mm. No protection against water (adapter only).



A Class II or double insulated electrical product uses reinforced protective insulation in addition to basic insulation. It has been designed in such a way that it does not require a safety connection to electrical earth (ground) (adapter only).



Safety isolating adapter, short-circuit proof.

1



Independent lighting auxiliary.

$t_c = 75^\circ\text{C}$

Maximum operating temperature of adapter.



Direct current (DC)



Alternating current (AC)

IP44

Protection against ingress of solid objects of  $\varnothing \geq 1$  mm and against water splashes from all sides (light chain only).



A Class III electrical product operates with a safe voltage range (light chain only).



Products marked with this symbol comply with all applicable community regulations of the European Economic Area.



Products that are marked with this symbol fulfil all applicable regulations for products being placed on the market in Great Britain (England, Wales and Scotland).

#### 2.3 GENERAL SAFETY INSTRUCTIONS



- » Do not use the product if light sources are missing or damaged. Dispose of the product immediately.
- » Do not use the product without all gaskets in place.

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep children under close supervision when using the product around them.
- The external flexible cable of this product cannot be replaced (Type Z); if the cable is damaged, the product shall be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product shall be replaced.
- Do not connect the product to an outlet while it is in the packaging.
- Do not connect this product electrically to another product.
- Do not immerse the product in water or other liquids.
- Only use the light chain with the provided adapter.
- The light chain is IP44 (not including adapter) and suitable for indoor and outdoor use. It should not be immersed in water or exposed to water jets (e.g. pressure washers). The supplied adapter is IP20 and suitable for indoors use only.

#### 2.4 ADDITIONAL SAFETY INSTRUCTIONS



- » Never retrieve an electrical product that has fallen into water. In such cases, immediately remove the adapter from the outlet.



- » Never use a damaged product or a product that has been dropped! In such cases, immediately remove the adapter from the outlet. Then contact the retailer's service centre to have the product checked or repaired.

2

### CAUTION! TRIP HAZARD!

- » Lay the cable in such a way that it cannot be pulled on or tripped over unintentionally.

### CAUTION! RISK OF DAMAGE!

- » To avoid damaging the cable, do not squeeze, bend or drag it over sharp edges. Keep the cable and the product away from hot surfaces and open flames.
- Before connecting the product to an outlet, make sure that the voltage specified on the rating plate of the product matches the mains voltage in your home. If this is not the case, contact your retailer and do not use the product.
- Never attempt to repair the product yourself. In the case of a fault, only have the product repaired by a qualified specialist.
- The product is not intended for operation with an external clock timer or a separate remote control system.
- Connect the adapter into an easily accessible outlet to ensure it can be disconnected quickly in case of an emergency.
- Do not operate the product with wet hands or while standing on a wet floor. Do not touch the adapter with wet hands.
- Always switch the product off before disconnecting the adapter from the outlet.
- Do not use the product near water or other liquids.

## 2.5 INTENDED USE

- This product is intended for decoration only. It is not suitable for indoor illumination.
- This product is only intended for household use and not suitable for commercial use.
- This product is not suitable for permanent installation or operation.
- The adapter is intended for dry indoor use only. The light chain is intended for indoor and outdoor use.
- Only use the product as mentioned in this manual. Any other use is considered improper and may result in damage to property or injury to persons.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

## 3 PACKAGE CONTENT

- 1× Light chain
- 1× Adapter

## 4 BEFORE FIRST USE

### WARNING! RISK OF SUFFOCATION!

- » Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. they could suffocate or swallow small parts.

### CAUTION! RISK OF DAMAGE!

- » Be cautious not to damage the product when opening the packaging. Avoid the use of sharp objects.
- 1. Take the product out of the packaging.
- 2. Remove all packaging materials.
- 3. Check that the delivery is complete.
- 4. Check whether the product or individual parts are damaged. If this is the case, do not use the product. Contact the after sales support using the contact points provided on the cover page of this manual.

3

- Store the product out of reach of children and pets.

## 7 TECHNICAL DATA

### 7.1 LIGHT CHAIN

|                         |                                                                       |                          |             |
|-------------------------|-----------------------------------------------------------------------|--------------------------|-------------|
| <b>Model:</b>           | 1331-SFTB                                                             | <b>Dimensions</b>        |             |
| <b>Power input:</b>     | 31 V $\overline{=}$ , 6 W                                             | <b>Light chain:</b>      | 1.5 x 0.9 m |
| <b>Number of modes:</b> | 11 (with memory function)                                             | <b>Cable:</b>            | 5 m         |
| <b>Timer function:</b>  | Yes                                                                   | <b>Protection class:</b> | III         |
|                         | 150 LEDs<br>(non-replaceable),<br>duo bulb<br>(warm white/cold white) | <b>IP rating:</b>        | IP44        |
| <b>Light source:</b>    |                                                                       | <b>Article number:</b>   | 853838      |

### 7.2 ADAPTER

|                      |                                     |                          |      |
|----------------------|-------------------------------------|--------------------------|------|
| <b>Model:</b>        | GP-SW310DC0193(UK)-1CT              | <b>Protection class:</b> | II   |
| <b>Power supply:</b> | 220–240 V $\overline{=}$ , 50/60 Hz | <b>IP rating:</b>        | IP20 |
| <b>Power output:</b> | 31 V $\overline{=}$ , 6 W           |                          |      |

## 8 DISPOSAL INSTRUCTIONS

### 8.1 DISPOSING OF THE PACKAGING

-  The product has been packaged to protect it from damage in transit. Packaging materials are raw materials and can therefore be reused or recycled.

### 8.2 DISPOSING OF THE PRODUCT

(Applicable in Great Britain, European Union and other European countries with separate collection systems of recyclable materials).

-  **Old appliances may not be disposed of in the household waste!**  
Should the product no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your city or county. This ensures that old products are recycled in a professional manner and also rules out negative consequences for the environment and human health. For this reason, electrical equipment is marked with the symbol shown here.

5

## 5 USE

### CAUTION! RISK OF DAMAGE!

- » Do not secure the product using staples, nails, wires or similar materials, which could damage the product and/or cable. Do not drill through or cut the product.
- » Use plastic cable ties or other light fixings to secure the light chain in position.

### NOTICE

- » The product is equipped with a memory function. The last mode used before disconnecting the product from the outlet will be the mode used when the product is connected back to the outlet.
- » A minimum of 5 supports per metre must be used to support the weight of the light chain and avoid putting strain on the power cord.

## 5.1 USING THE PRODUCT

1. Position the light chain.
2. Connect the plug of the light chain to the adapter. Make sure the gasket is in place.
3. Connect the adapter to a suitable outlet.
4. Press the button on the adapter to switch on the product. The first mode is active. Press the button again to change to the next mode. The product has 11 modes.  
COMB -> C1 Steady ON -> C2 Steady ON -> C1 Mixture -> C2 Mixture -> C2 Slo-Glo -> Breathing -> C1 Slo-Glo -> C2 Slo-Glo -> Slow Fade -> In Waves
5. To switch off the product, disconnect the adapter from the outlet.

## 5.2 TIMER FUNCTION

1. Press and hold the button on the adapter to activate the timer. The timer function indicator in the button lights up. The product activates the 6 hours on, 18 hours off timer. The mode can be changed while the timer function is activated, however once the product is switched off, the timer function is also switched off.
2. Press and hold the button again to deactivate the timer. The timer function indicator switches off.

## 6 CLEANING AND CARE

### 6.1 CLEANING

### WARNING! RISK OF ELECTRIC SHOCK!

- » Disconnect the product from the outlet before cleaning.
- » During cleaning, do not immerse the product in water or other liquids. Never hold the product under running water.

### CAUTION! RISK OF DAMAGE!

- » Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. These could damage the surfaces of the product.

1. Wipe the product clean with a damp cloth. Apply a small amount of mild detergent for stubborn dirt as needed.
2. Let all parts dry completely.

### 6.2 STORAGE

- Before storing the product, clean all parts of the product (refer to chapter **CLEANING**).
- Dry the product completely before storage.
- Always store the product in a dry and cool place, at an ambient room temperature.

4

## 9 WARRANTY

Please contact our AFTER SALES SUPPORT by phone or e-mail before sending in the product.

This allows us to provide support in the event of possible operator errors.

### 9.1 WARRANTY CONDITIONS

Dear Customer,  
The ALDI warranty offers you extensive benefits:

|                        |                                                                                                                                                    |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Warranty period:       | 1 years from date of purchase.<br>6 months for wear parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries). |
| Costs:                 | Free repair/exchange<br>No transport costs                                                                                                         |
| Hotline:               | 01909 517672 (GB) / 012 475 437 (IE)<br>(The cost of calls from your landline and mobile may vary depending upon your service provider)            |
| Phone lines available: | Monday to Friday, 9 am-8 pm<br>Saturday to Sunday, 10 am-4 pm                                                                                      |

Please contact our AFTER SALES SUPPORT by phone or e-mail before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

- The faulty item together with the original purchase receipt
- The product with all components included in the packaging

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire)
- Improper use or transport
- Disregard of the safety and maintenance instructions
- Other improper treatment or modification of the product

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights. In the event that a product is received for repair, neither the service company nor the seller will assume any liability for data or settings possibly stored on the product by the customer.

6