



User Manual

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.

GB

IE

PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE
Visit us at www.aldi.com

AFTER SALES SUPPORT

854404



GB

IE

01909 517672



aldi@0800repair.com

MODEL:

1217-TR, 1217-RE

01/2026

3

 
YEAR
WARRANTY

WORKZONE®


RECHARGEABLE LED WORKLIGHT




1217-TR

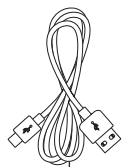



6

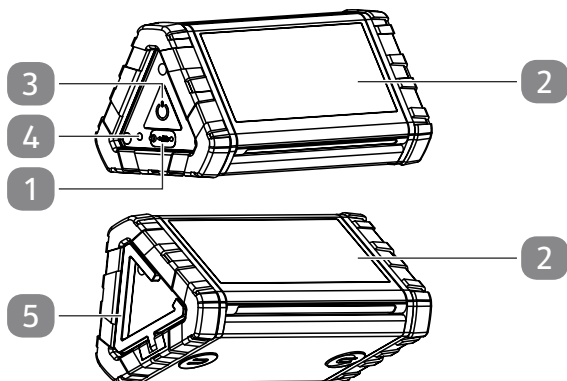 

1217-RE

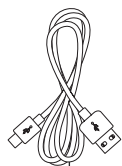 

6

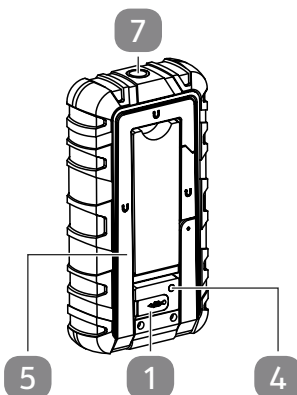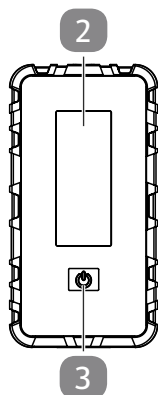  

Package contents/control elements

- 1** USB port
- 2** LED
- 3** ON/OFF switch
- 4** Charging indicator
- 5** Base/eyelet
- 6** USB power cable
- 7** Auxiliary light

Table of content

Overview.....2

Package contents/control elements.....3

General information.....5

 Reading and storing the user manual.....5

Proper use..... 5

Explanation of symbols.....5

Safety.....6

 Safety notes..... 6

 Safety notes for batteries.....8

Before first use..... 9

 Check the product and scope of delivery..... 9

 Charging the product.....9

Operation..... 10

 Switching the light on/off and changing settings..... 10

 Positioning the product.....10

Cleaning..... 11

 Cleaning the device..... 11

Inspection.....12

Storage..... 12

Troubleshooting.....12

Technical data..... 13

Declaration of conformity..... 13

Disposal..... 14

 Disposing of packaging..... 14

General information

Reading and storing the user manual



This user manual forms part of this rechargeable LED worklight, hereinafter also referred to as product. It contains important information on how to set up and use the device.

Read the user manual carefully, in particular the safety instructions, before using the product. Failure to follow this user manual may lead to severe injuries or product damage.

Keep this user manual for future reference. If you pass this product on to a third party, you must also supply this user manual.

You can also obtain these operating instructions from our website
<https://www.wachsmuth-krogmann.com>

Proper use

The product is exclusively intended for lighting indoor and outdoor workspaces. The product is not suitable as a reading light. It is only intended for private indoor use and not suitable for commercial purposes.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

Explanation of symbols

The following symbols are used in this user manual, on the product or on the packaging.



This symbol provides you with useful additional information on handling and use.



Declaration of conformity (see chapter “Declaration of conformity”):
Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.

Explanation of symbols



The UK Conformity Assessed (UKCA) seal states that the product meets all legal requirements in the UK and that the corresponding conformity assessments were successfully completed.



The product meets the specifications of protection class III and is operated with safety extra-low voltage.

IP44

The product is protected against penetrating foreign objects with a diameter of ≥ 1 mm and it is splashproof from all directions.



This product is in risk group 2. Improper use of the product may cause eye damage. Do not stare into the active light source!

Safety

The following signal words are used in this user manual.



WARNING!

This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.



CAUTION!

This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.

NOTE!

This signal word provides a warning about potential material damage.

Safety notes



WARNING!

Risk of electric shock!

Faulty electric installation or excess voltage can cause an electric shock.

- Only connect the power cable if the voltage of the voltage source matches the information shown on the rating plate.
- The product must only be operated with extra low voltage (in line with the class III marking on the product).

 WARNING!

Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep children under 8 away from the product and the power cable.
- Do not leave the product unattended when in use.
- Children may not play with the product.
- Do not let children play with the packaging film. They may become tangled when playing and suffocate.
- Children must not clean or service the device unsupervised.

 CAUTION!

Risk of injury!

The light of the LEDs is very bright and can damage your eyes when looking directly at them.

- Do not look directly into the light of the LEDs.
- Do not look at the LEDs with an optical instrument while the product is in operation.

NOTE!

Risk of damage!

Improper assembly can damage the product.

- Charge the product once the light output decreases to prevent the battery from suffering a deep discharge.
- Operate the product on an easily accessible, level, dry, heat resistant and sufficiently stable work surface. Never place the product on the edge of the work surface.
- Never place the product on or near hot surfaces (stove tops, etc.) and never expose the product to high temperatures (heaters, etc.) or to bad weather (rain, etc.).
- Never immerse the product in water to clean it, and do not use a steam cleaner. This can damage the product.
- Stop using the product if any of its components are cracked or deformed. Only replace damaged components with matching original spare parts.
- Do not attempt to repair or modify the product yourself. Have repairs carried out by trained personnel.

Safety notes for batteries



Risk of explosion!

- Never short-circuit the battery.
- Never open the battery.
- Do not throw the battery into a fire.
- Only charge the product via the supplied USB cable on a suitable USB charger or via the USB port on a computer.
- Charge the battery at room temperature.
- This product contains batteries that cannot be replaced. Correctly dispose of the product once the battery has reached the end of its service life.

 CAUTION!**Risk of chemical burns!**

- Never open the battery.
- If battery fluid leaks out, avoid contact with the skin, eyes and mucus membranes. Rinse the affected region immediately with plenty of clear water and contact a physician immediately.
- Wear protective gloves in case of a leaky battery.



If the battery is defective, the complete product must be disposed of correctly.

Before first use**Check the product and scope of delivery****NOTE!****Risk of damage!**

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the product's surface.

- Proceed carefully with opening the packaging.
1. Take the product out of the packaging.
 2. Check that the delivery is complete (see chapter "Package contents/control elements").
 3. Inspect the product and individual parts for damage. Do not operate a damaged product, instead, contact the manufacturer via the service center listed on the warranty card.

Charging the product

Fully charge the battery before using the product for the first time. For this purpose, use the enclosed USB power cable  6. Always charge the product indoors in a dry environment.

1. Open the USB port  1 cover.
2. Connect the USB power cable to the USB port.

Before first use

- 3. Connect the USB power cable to the USB port of a mains adapter.
The charging indicator 4 lights up red. The charging indicator lights up green as soon as the product is fully charged.
- 4. Pull the USB power cable out of the product's USB port and the mains adapter.

Operation

Switching the light on/off and changing settings

Model 1217-TR

Press the ON/OFF switch 3 to switch the LED 2 on, off and change the settings.

Model 1217-RE

Press the ON/OFF switch 3 to switch the LED 2 on, off and change the settings as well as to switch the auxiliary light 7 on and off.

Press the ON/OFF switch to set the following light modes:


Model:		1217-TR	1217-RE
Press button	1x	Both LEDs light up	LED lights up (100%)
	2x	LED 1 lights up	LED lights up (50%)
	3x	LED 2 lights up	Auxiliary light lights up
	4x	OFF	OFF

Positioning the product


If necessary, unfold the base/eyelet 5 and position the product on an adequately even surface or hang it up. Alternatively use the integrated magnet to attach the product to magnetic surfaces.

Folding out the LED (model 1217-TR)

 Fold out the LED **2** to adapt the light output to your demands.

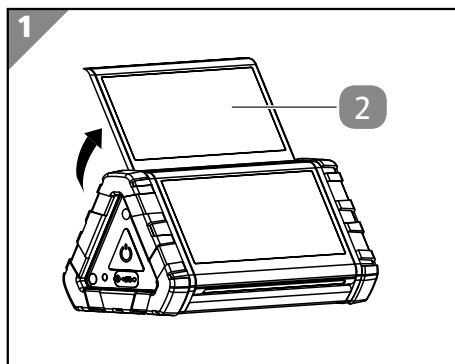**Folding out the base (model 1217-RE)**

 Adapt the base **5** in a range of $\leq 12\text{cm}$ to guarantee the product remains stable on an even surface.

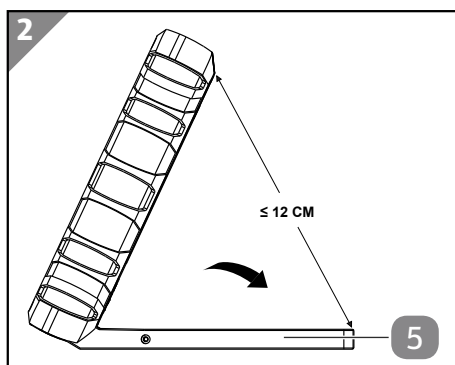

Cleaning

NOTE!**Risk of damage!**

Improper handling can damage the product.

- Do not use any harsh cleaning products, brushes with metal or nylon bristles, or sharp or metallic cleaning materials such as knives, hard scrapers or similar. They may damage the surfaces.

Cleaning the device

Wipe the surfaces down with a dry cloth.

Inspection

Before each use check that:

- the product is undamaged,
- the controls are not damaged,
- the accessories are in perfect condition.

Do not operate a damaged product or accessory. Instead, have it inspected and repaired by the manufacturer or their customer service or a similarly qualified person.

Storage

NOTE!

Risk of damage!

Improper storage of the product can result in damage.

- Store the product in a clean, dry, frost-protected place out of the reach of children.

All parts must be completely dry before they are put away.

- Always store the product in a dry place.
- Protect the product from direct sunlight.
- Store the product out of the reach of children, safely closed, at a storage temperature between +5 °C and +20 °C (room temperature).

1. Thoroughly clean the product (see section "Cleaning").
2. Roll up the USB cable without knots or bends.

Troubleshooting

Problem	Possible cause	Remedy
Decreasing light output.	Low battery.	Charge the product (see section "Charging the product").
Product not working.	The battery is empty.	Charge the product (see section "Charging the product").
	The battery is defective.	Dispose of the product.
	The illuminant is defective.	

Technical data

Model number:

Battery type:

Supply voltage:

Protection class:

Charging time:

LED type:

LED colour:

Brightness:

On time:

Max. projection area:

Dimensions:

Weight:

IP rating:

USB power cable length:

1217-TR

3.7 V ===; Li-ion, 3,600 mAh

Input (USB): 5 V ===/ 1 A



approx. 5 hours

5 W COB (x2)

6500 K (± 500 K)

500 lm (± 10%) per LED panel

at max. 3 hours

2 x 5,600 mm², 11,200 mm² in total

approx. 15.5 x 8.5 x 7.5 cm

approx. 360 g

IP44

approx. 100 cm

Model number:

Battery type:

Supply voltage:

Protection class:

Charging time:

LED type:

LED colour:

Auxiliary light:

Brightness:

On time:

Max. projection area:

Dimensions:

Weight:

IP rating:

USB power cable length:

1217-RE

3.7 V ===; Li-ion, 2,200 mAh

Input (USB): 5 V ===/ 1 A



approx. 4 hours

10 W COB

6500 K (± 500 K)

1 x SMD3030, 6500 K (±500 K)

100%: at max. 800 lm/50%: at max. 400 lm/

auxiliary light: at max. 80 lm (± 10%)

at max. approx. 3 hours (main light),

at max. approx. 7 hours (auxiliary light)

1,858 mm²

approx. 14.2 x 7.5 x 3.0 cm

approx. 240 g

IP44

approx. 100 cm

The light source of this lamp must exclusively be replaced by the manufacturer, a service engineer commissioned by the manufacturer or persons with equivalent qualifications.

Declaration of conformity



AHG Wachsmuth & Krogmann mbH, Burchardstraße 14, 20095

Hamburg, Germany, hereby declares in sole responsibility that the above product meets the basic requirements of the stated EU directive.

You can obtain the EU Declaration of Conformity from the manufacturer (address stated in the warranty card).



You can request the UK declaration of conformity from the address provided at the end of this manual.

Disposal

Disposing of packaging



Dispose of packaging according to type. Sort the paperboard and cardboard as waste paper and the film as recyclable material.



Old electrical products may not be disposed of as household waste!

If the product cannot be used anymore, each consumer **is obligated by law to dispose of old products separately from household**

waste, e.g. at a municipal/city district collection point. It is thereby ensured that old products are professionally recycled and negative effects on the environment are avoided. Therefore, electrical products are marked with the above symbol.

The product contains a battery that cannot be removed by end customers. Contact a specialist for correct disposal.



The symbol opposite means that batteries and accumulators must not be disposed of with household waste. Consumers are legally obliged to dispose of batteries and rechargeable batteries separately.

Batteries and rechargeable batteries can be returned free of charge to a collection point in your municipality/borough or to a retailer so that they can be disposed of in an environmentally friendly manner and valuable raw materials can be recovered. Improper disposal can result in toxic substances being released into the environment, which can have harmful effects on humans, animals and plants.

Batteries and rechargeable batteries contained in electrical appliances must be disposed of separately if possible. Only dispose of batteries and rechargeable batteries when they are discharged.

If possible, use rechargeable batteries instead of disposable batteries.

Before disposing of lithium-containing batteries and rechargeable batteries, tape off the terminals to prevent an external short circuit. A short circuit can lead to a fire or explosion.

Batteries with increased pollutant content are also marked with the following symbols: Cd = Cadmium, Hg = Mercury, Pb = Lead, Li = Lithium