






HANDHELD PORTABLE FAN

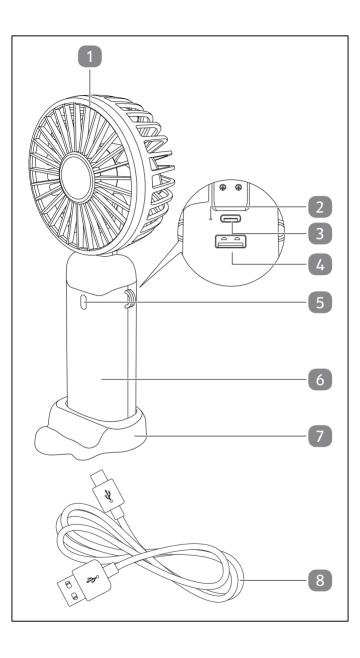

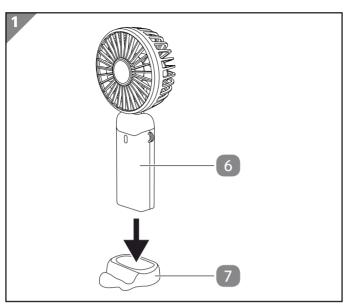



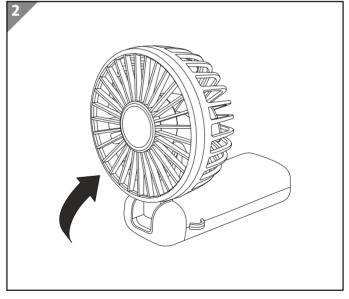

Scope of delivery/device parts

Scope of delivery/device parts

- 1 Fan
- 2 Charging indicator
- 3 USB connector type C
- 4 USB connector type A
- 5 On/off switch
- 6 Handle
- 7 Stand
- 8 USB cable

Table of content

Overview	2
Scope of delivery/device parts	4
General information	6
Reading and storing the user manual	6
Proper use	
Explanation of symbols	
Safety	7
Safety notes	
Before first use	11
Check the product and scope of delivery	11
Operation	12
Charge Battery	12
Set up product	
Powerbank function	
Cleaning	13
Cleaning the device	13
Inspection	14
Storage	14
Technical data	14
Declaration of conformity	15
Waste disposal and environmental protection	
Disposing of packaging	15
Dispose of old electrical device	

General information

Reading and storing the user manual



These operating instructions belong to this Handheld Portable Fan, hereinafter also referred to as the product. It contains important information on commissioning and operation.

Read the user manual carefully, in particular the safety instructions, before using the product. Failure to follow this user manual may lead to severe injuries or product damage.

Keep this user manual for future reference. If you pass this product on to a third party, you must also supply this user manual.

You can also obtain these operating instructions from our website http://www.wachsmuth-krogmann.com

Proper use

The product is designed to circulate air in the immediate vicinity and can be used as a powerbank.

It is only intended for private indoor use and not suitable for commercial purposes.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The product is not a children's toy.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

Explanation of symbols

The following symbols are used in this user manual, on the product or on the packaging.



This symbol provides you with useful additional information on handling and use.



Declaration of conformity (see chapter "Declaration of conformity"): Products marked with this symbol meet all the applicable Community regulations of the European Economic Area



The UK Conformity Assessed (UKCA) seal states that the product meets all legal requirements in the UK and that the corresponding conformity assessments were successfully completed.



The product meets the specifications of protection class III and is operated with safety extra-low voltage.



Use the provided USB cable to connect to a 5 Volt USB power supply. The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

Safety

The following signal words are used in this user manual.

A WARNING!

This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.

A CAUTION!

This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.

NOTE!

This signal word provides a warning about potential material damage.

Safety notes

MARNING!

Risk of electric shock!

Faulty electric installation or excess voltage can cause an electric shock.

- Only connect the power cable if the voltage of the voltage source matches the information shown on the rating plate.
- The product must only be operated with safety extra low voltage (in line with the class III marking on the product).

WARNING!

Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- Children aged 8 years and older as well as people with reduced physical, sensory or mental abilities or a lack of experience and knowledge may only use this product if they are supervised or have been given instruction on using the product in a safe way and understand the hazards involved.
- Keep children under 8 away from the product and the power cable.
- Do not leave the product unattended when in use.
- Children may not play with the product.

- Do not let children play with the packaging film. They may become tangled when playing and suffocate.
- Children must not clean or service the device unsupervised.

A WARNING!

Safety instructions for rechargeable batteries

- Keep batteries/rechargeable batteries out of reach of children. If any part was swallowed, immediately see a doctor.
- The rechargeable battery is not exchangeable. When it has reached the end of its life, the entire product must be replaced.
- Never try to recharge non-rechargeable batteries. Do not short-circuit batteries/ rechargeable batteries or open them up. This may result in overheating, risks of fire, or bursting.
- Never throw batteries/rechargeable batteries in fire or water.
- Do not subject batteries/rechargeable batteries to mechanic stress.

A CAUTION!

Risk of batteries/rechargeable batteries leaking

 Avoid exposing batteries / rechargeable batteries to extreme conditions or temperatures, e.g. on radiators/in direct sunlight.

Safety

- Prevent any contact with skin, eyes and mucosa! After any contact with battery acid, rinse affected part of body with sufficient quantities of clear water and immediately see a doctor!
- Leaking or damaged batteries / rechargeable batteries can cause chemical burns if they come into contact with the skin. Accordingly, please wear suitable protective gloves for handling.
- In the event of leaking batteries, remove them immediately from the product in order to prevent damage.

NOTE!

Risk of damage!

Improper assembly can damage the product.

- Operate the product on an easily accessible, level, dry, heat resistant and sufficiently stable work surface. Never place the product on the edge of the work surface.
- Never place the product on or near hot surfaces (stove tops, etc.) and never expose the product to high temperatures (heaters, etc.) or to bad weather (rain, etc.).
- Never immerse the product in water to clean it, and do not use a steam cleaner. This can damage the product.
- Stop using the product if any of its components are cracked or deformed. Only replace damaged components with matching original spare parts.

- Do not attempt to repair or modify the product yourself. Have repairs carried out by trained personnel.
- Never expose the product to weather influences, direct sunlight or hot air circulation.

Before first use

Check the product and scope of delivery

A WARNING!

Danger of suffocation!

Children may become tangled up in the packaging film when playing with it and suffocate.

Do not let children play with the packaging film.

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the product's surface.

- Proceed carefully with opening the packaging.
- 1. Remove the product from the packaging.
- 2. Check that the delivery is complete (see chapter "Scope of delivery/device parts").
- 3. Check the product and the individual parts for damage. Do not use a damaged product and contact the address given at the end of this manual.

Charge the product's battery **1** completely before first use (see section "Charge Battery").

Operation

Charge Battery

NOTE!

Risk of damage!

Improper charging of the integrated batteries may result in damage to the product.

- Only use the supplied charging cable to charge the product.
- Only charge the product in dry, interior rooms.
- Do not use a USB extension cable.
- Place the product on an easily accessible, level, dry, and sufficiently stable surface.
- Ensure that the product is securely held in place.
- Connect the USB cable 8 to the USB port 3 and a power source.

The charging indicator 2 changes depending on the charging status.

During the charging process

The charging indicator flashes red during the charging process.

The charging indicator lights up red when charging is complete.

During operation

The charging indicator does not light up.

The charging indicator flashes blue when the battery needs to be charged.



During the charging process, the fan does not work.



When used as a powerbank, the fan can be operated.



The fan cannot be operated while it is connected to a power source.

 Press the on/off switch 5 to switch on the product 1 and set the speed.

Press once: The fan rotates at low speed.
Press twice: The fan rotates at medium speed.
Press three times: The fan rotates at high speed.

Press four times: The fan stops.

Set up product

You can set up the product using the stand 7 supplied to increase stability or by flaping the handle 6 (see **Fig. 1**/ **Fig. 2**).

Powerbank function

Operate or charge suitable devices using the product's battery.

- Connect the device to the USB connector 4 using the USB cable (not included).
- Remove the USB charging cable from the USB port as soon as you are no longer using the product as a power bank.

Cleaning

NOTE!

Risk of damage!

Improper handling can damage the product.

 Do not use any harsh cleaning products, brushes with metal or nylon bristles, or sharp or metallic cleaning materials such as knives, hard scrapers or similar. They may damage the surfaces.

Cleaning the device

Wipe the surfaces down with a dry cloth.

Inspection

Before each use check that:

- the product is undamaged,
- the controls are not damaged,
- the accessories are in perfect condition,
- the vents are clear and clean.

Do not operate a damaged product or accessory. Instead, have it inspected and repaired by the manufacturer or their customer service or a similarly qualified person.

Storage

NOTE!

Risk of damage!

Improper storage of the product can result in damage.

- Store the product in a clean, dry, frostprotected place out of the reach of children.

All parts must be completely dry before they are put away.

- Always store the product in a dry place.
- Protect the product from direct sunlight.
- Store the product out of the reach of children, safely closed, at a storage temperature between +5 °C and +20 °C (room temperature).
- 1. Thoroughly clean the product (see section "Cleaning").
- Roll up the USB cable without knots or bends.
- 3. Do not place any objects on the product during storage.

Technical data

Model: 1239-W; 1239-G

Part Number: 832931

Rechargeable battery type: 3.7 V ===; Li-ion, 2,000 mAh

Supply voltage: Input (USB type C): 5 V === / 2 A

Powerbank: Output (USB type A): 5 V === /1A

Protection class:

Max. Running time: 360 min (+/- 30)

Max. Power: 2.5 W

Charging time: approx. 3 hours with 5 V / 2 A supply

Speed levels: 3

USB cable length: Dimensions (W × D × H): Weight: approx. 90 cm approx. 19.8 × 9 × 4.6 cm approx. 154 q

Declaration of conformity



You can request the EU declaration of conformity from the address provided at the end of this manual.



You can request the UK declaration of conformity from the address provided at the end of this manual.

Waste disposal and environmental protection Disposing of packaging





Locally

Dispose of packaging according to type. Sort the paperboard and cardboard as waste paper and the film as recyclable material.

Dispose of old electrical device

Applicable in the European Union and other European countries with systems for separate collections of recyclable waste.



Old electrical products may not be disposed of as household waste!

If the product cannot be used anymore, each consumer is obligated by law to dispose of old products separately from household waste, e.g. at a municipal/city district collection point. It is

thereby ensured that old products are professionally recycled and negative effects on the environment are avoided. Therefore, electrical products are marked with the above symbol.



The symbol opposite means that batteries and accumulators must not be disposed of with household waste. Consumers are legally obliged to dispose of batteries and rechargeable batteries separately.

Batteries and rechargeable batteries can be returned free of charge to a collection point in your municipality/borough or to a retailer so that they can be disposed of in an environmentally friendly manner and valuable raw materials can be recovered. Improper disposal can result in toxic substances being released into the environment, which can have harmful effects on humans, animals and plants.

Waste disposal and environmental protection

Batteries and rechargeable batteries contained in electrical appliances must be disposed of separately if possible. Only dispose of batteries and rechargeable batteries when they are discharged.

If possible, use rechargeable batteries instead of disposable batteries.

Before disposing of lithium-containing batteries and rechargeable batteries, tape off the terminals to prevent an external short circuit. A short circuit can lead to a fire or explosion.

Batteries with increased pollutant content are also marked with the following symbols: Cd = Cadmium, Hg = Mercury, Pb = Lead, Li = Lithium



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE WARWICKSHIRE, CV9 2SH

ALDI STORES (IRELAND) LTD. PO BOX 726, NAAS, CO. KILDARE Visit us at www.aldi.com

AHG Wachsmuth & Krogmann mbH Burchardstraße 14 20095 Hamburg GERMANY

AFTER SALES SUPPORT	832931	
GB (IE) 01909 517672		
aldi@0800repair.com		
MODEL: 1239-W; 1239-G	05/2024	