


User Manual



3-IN-1 UNIVERSAL LIGHT



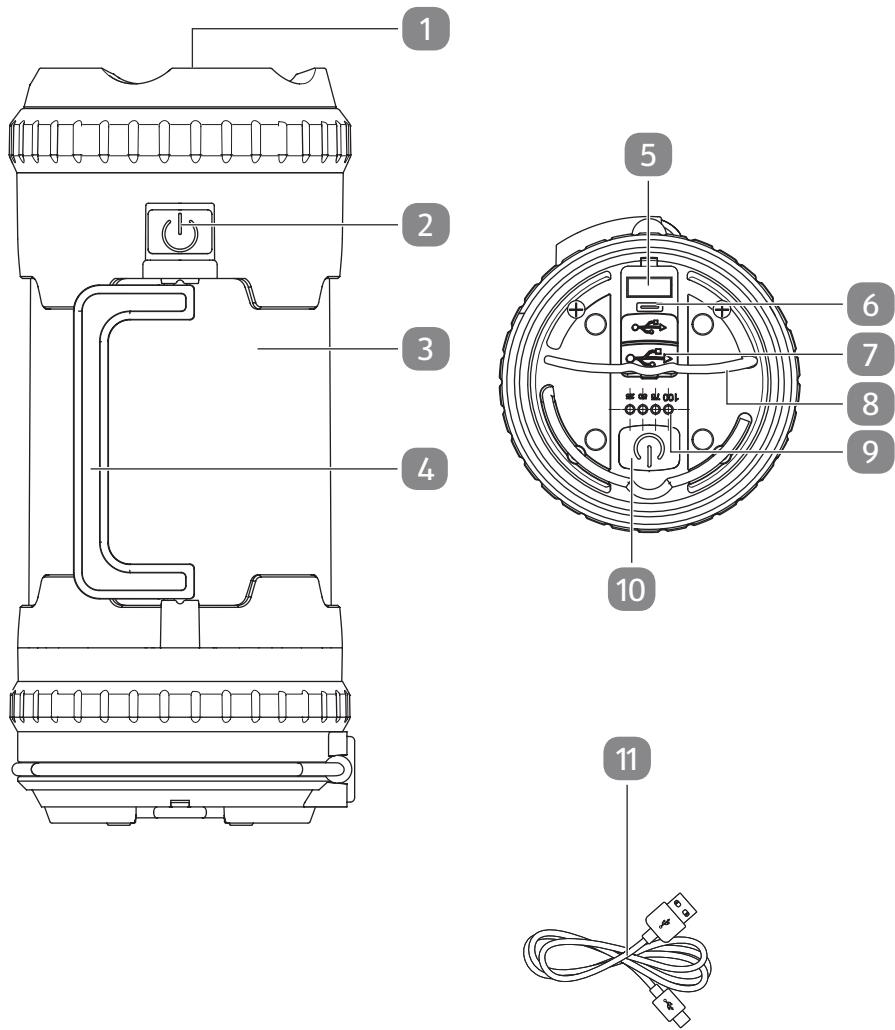

Package contents/device parts

- 1** Torch
- 2** Torch ON/OFF switch
- 3** Lamp
- 4** Carry handle
- 5** Power bank USB socket output
- 6** USB charge socket
- 7** USB socket cap
- 8** Hanging bracket (x2)
- 9** Battery charging status indicator
- 10** Lamp ON/OFF switch
- 11** USB charging cable

User manual and warranty card (not shown)

Table of content

Overview	2
Package contents/device parts	3
General information	5
Reading and storing the user manual.....	5
Proper use	5
Explanation of symbols	5
Safety	6
Safety notes.....	6
Before first use	9
Check the product and scope of delivery.....	9
Charging for the first time.....	9
Operation	9
Cleaning	11
Declaration of conformity	12
Technical data	12
Disposal	12

General information

Reading and storing the user manual

 This user manual forms part of the 3-in-1 universal light (hereinafter also called "product"). It contains important information on how to set up and use the device.

Read the user manual carefully, in particular the safety instructions, before using the product. Failure to follow this user manual may lead to severe injuries or product damage.

This user manual is based on the standards and regulations that are valid within the Australia. Outside the Australia, please also note the country-specific directives and laws.

Keep this user manual for future reference. If you pass this product on to a third party, you must also supply this user manual.

You can also obtain these operating instructions from our website
<https://www.wachsmuth-krogmann.com>

Proper use

This product is intended as a mobile indoor light source and can be used as a power bank.

The product is intended for private use only and is not suitable for commercial use. Use the product only as described in this operating manual. Any other use is improper and may lead to product damage or even personal injury. This product is not a toy.

The manufacturer or retailer assumes no liability for damage caused by improper or incorrect use.

Explanation of symbols

The following symbols are used in this user manual, on the product or on the packaging.



This symbol provides you with useful additional information on handling and use.



Declaration of conformity (see chapter "Declaration of conformity"): Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.

IP44

The product is protected against penetrating foreign objects with a diameter of ≥ 1 mm and it is splashproof from all directions.



Products marked with this symbol correspond to protection class III.



Universal Serial Bus (USB)

Safety

The following signal words are used in this user manual.

WARNING!

This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.

CAUTION!

This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.

NOTE!

This signal word provides a warning about potential material damage.

Safety notes

WARNING!

Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children may not play with the product.
- Children must not clean or service the device unsupervised.

- Keep children under 8 away from the product and the power cable.
- Do not leave the product unattended when in use.



WARNING!

Risk of electric shock!

Faulty electric installation or excess voltage can cause an electric shock.

- Only connect the power cable if the voltage of the voltage source matches the information shown on the rating plate.
- The product must only be operated with extra low voltage (in line with the class III marking on the product).



CAUTION!

Danger of burns!

Parts of the product become hot during use. Illuminants become hot and very bright.

- Do not look directly into the light of the LEDs.
- Make sure not to shine the light into the eyes of persons or animals when checking or commissioning the product.
- Do not look at the LEDs with an optical instrument while the product is in operation.



CAUTION!

Risk of injury!

- The product must not be modified or technically altered.
- Use parts and components intended by the manufacturer only.
- Do not continue to operate this product as soon as you notice any damage.

Safety

- Exclusively have repairs carried out by the manufacturer, its service centre or a qualified electrician.

Safety notes for batteries



CAUTION!

Risk of explosion!

- Never short-circuit the battery.
- Never open the battery.
- Do not throw the battery into a fire.
- Only charge the product via the supplied USB cable on a suitable USB charger or via the USB port on a computer.
- Charge the battery at room temperature.



CAUTION!

Risk of chemical burns!

- Never open the battery.
- If battery fluid leaks out, avoid contact with the skin, eyes and mucus membranes. Rinse the affected region immediately with plenty of clear water and contact a physician immediately.
- Wear protective gloves in case of a leaky battery.

If the battery is defective, the complete product must be disposed of correctly.



Before first use

Check the product and scope of delivery

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the product's surface.

- Proceed carefully with opening the packaging.

1. Take the product out of the packaging.
2. Check that the delivery is complete (see chapter "Package contents/device parts").
3. Inspect the product and individual parts for damage. Do not operate a damaged product, instead, contact the manufacturer via the service center listed on the warranty card.

Charging for the first time

Proceed as described in the Operation section and fully charge the product battery before its first use.

Operation

The product features different lighting modes:

- Torch: 100 % and 50 % (white)
- Lamp: 3 LEDs and 1 LED (white)

Switching the torch **1** on/off

Press the torch ON/OFF switch **2** as described below:

- Press 1 x: white light, 100 %
- Press 2 x: white light, 50 %
- Press 3 x: off

Switching lamp **3** on/off

Press the lamp ON/OFF switch **10** as described below:

- Press 1 x: white light, 3 LEDs light up
- Press 2 x: white light, 1 LED lights up
- Press 3 x: off

Charging the battery



Charge the battery for a minimum of 2 hours at the latest every 4 months to maintain the battery capacity.

If the battery charge drops below 25 %, only one LED of the battery charging status indicator **9** lights up and it is advisable to charge the battery.

It is not possible to switch on the product during the charging process and thus continuous operation is unavailable.

1. Open the USB socket cap **7**.
2. Plug in the USB charging cable **11** to the USB charge socket **6**.
3. Plug in the opposite end of the USB charging cable to an outlet using a suitable USB adapter (not included with package contents).

The technical data of the mains adapter must match the product's technical data!

*The battery charging status indicator **9** flashes when the battery is charging. All 4 LEDs permanently light up as soon as the battery is fully charged.*

It takes around 10.5 hours to fully charge the battery.

4. Unplug the USB charging cable **11** from the charge socket **6** as soon as the battery is charged.
5. Cover the USB socket with the cap **7**.

The battery has been charged.

Checking the battery's state of charge

Press the lamp ON/OFF switch once **10** and the battery charging status indicator **9** indicates the battery's state of charge. The display automatically goes off after a short while.

- 1 LED: 25 %
- 2 LEDs: 50 %
- 3 LEDs: 75 %
- 4 LEDs: 100 %

Hanging up the product

Hang the product in a suitable place using the hanging brackets **8** (protected from moisture and heat, etc.).

Power bank function

Use the product's battery to operate or charge suitable devices.

1. Open the USB socket cap **7**.

2. Use the USB charging cable **11** to connect the device to the power bank USB socket **5**.
The connected device is then supplied with power.
3. Disconnect the USB charging cable **11** from the power bank USB socket **5** as soon as you are no longer using the product as a power bank.
4. Cover the USB socket with the cap **7**.

The product has been used as a power bank.

Cleaning

NOTE!

Risk of short circuit!

If water or other liquids enter the housing, they can cause a short circuit.

- Do not immerse the product in water or other liquids.
- Make sure that no water or other liquid gets inside the housing.

NOTE!

Risk of damage!

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy it.

1. Close all sockets using the intended covers before cleaning.

Water must not penetrate the sockets. Moisture may short-circuit and destroy the battery.

2. Allow the product to cool down completely.
3. Wipe the product with a slightly damp cloth. Then allow all parts to dry completely.

The product is clean.

Declaration of conformity



The EU declaration of conformity can be requested from the address given on the enclosed warranty card.

Technical data

Model:	WS1-N
Item number:	691649
Illuminant:	max. 8.4 W (46 LED)
Colour temperature:	6500 K
Torch Lumens:	290 lm without protective lens
Lamp Lumens:	310 lm
Battery type:	3.7 V ===; Li-ion; 4400 mAh
Operating voltage/current	5.0 V ===/1.0 A
Output voltage/current (power bank)	5.0 V ===/1.0 A
Risk group (as per EN 62471:2008):	I
Protection class:	III
IP rating:	IP44

- The light source and battery of this light are not replaceable. When the light has reached the end of its service life, the light must be disposed of.

Disposal

Disposing of the packaging



- Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

Disposing of the product

- Should the product no longer be capable of being used at some point in time, **dispose of it in accordance with the regulations in force in your city or county.**
- Please ensure your recycling information applies to the local regulations.



The symbol opposite means that batteries and accumulators must not be disposed of with household waste. Consumers are legally obliged to dispose of batteries and rechargeable batteries separately.

Batteries and rechargeable batteries can be returned free of charge to a collection point in your municipality/borough or to a retailer so that they can be disposed of in an environmentally friendly manner and valuable raw materials can be recovered. Improper disposal can result in toxic substances being released into the environment, which can have harmful effects on humans, animals and plants.

Batteries and rechargeable batteries contained in electrical appliances must be disposed of separately if possible. Only dispose of batteries and rechargeable batteries when they are discharged.

If possible, use rechargeable batteries instead of disposable batteries.

Before disposing of lithium-containing batteries and rechargeable batteries, tape off the terminals to prevent an external short circuit. A short circuit can lead to a fire or explosion.

Batteries with increased pollutant content are also marked with the following symbols: Cd = Cadmium, Hg = Mercury, Pb = Lead, Li = Lithium



This product contains batteries that cannot be replaced.

Please visit www.wachsmuth-krogmann.com online for battery removal instructions for disposal companies.



3-in-1 universal light

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

This product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We strongly recommend that you retain the original packaging that your product came in for future safe transportation.

Please refer to your Warranty Certificate for further information.

AFTER SALES SUPPORT

1800 898 750

service@wkfe.com.hk





3-in-1 universal light

Repair and Refurbished Goods or Parts Notice

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1800 898 750 or write to us at:

Install + Fix Solutions

Unit 1, 9 Kingsbury Street,

Brendale, QLD 4500,

AUSTRALIA

1800 898 750 (Mon-Fri, 8:30 am-6 pm)

service@wkfe.com.hk

AFTER SALES SUPPORT

1800 898 750

service@wkfe.com.hk

A large, bold number '1' inside a rounded rectangular frame, with the words 'YEAR WARRANTY' in a smaller, bold, sans-serif font below it.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.

AU

Made in China

ADVENTURIDGE® is a registered trademark of ALDI Stores

DISTRIBUTED BY:

ALDI STORES
1 SARGENTS ROAD
MINCHINBURY NSW 2770
www.aldi.com.au

AFTER SALES SUPPORT

691649

W1

 **AU 1800 898 750**

 **service@wkfe.com.hk**

MODEL:
WS1-N

12/2025

1

**YEAR
WARRANTY**