

User Manual

AMBIANO®

CERAMIC

TOWER HEATER



Controls



Operation Buttons

The buttons on the appliance are sensor touch buttons. In order to perform the corresponding function gently touch the buttons, it will be confirmed by a beep sound.

Control Panel	Remote Control	Function
		Switching the appliance on/standby
		Switch display on/off
		Time-delayed switch-off: 00 to 12 hours
		Switch oscillation on/off
MODE		Power level selection (, and)
+		Increase temperature
-		Decrease temperature

Overview of the Components

- 1 Handle
- 2 Grille for heating elements
- 3 Stand
- 4 Safety Switch
- 5 Display
- 6 MODE button (FAN / LOW / HIGH)
- 7 +button (increase temperature)
- 8 -button (decrease temperature)
- 9 Indicator lamps
- 10 button (switching the appliance on/standby)
- 11 button (switch display on/off)
- 12 button (time-delayed switch-off)
- 13 button (switch oscillation on/off)
- 14 Remote Control

Table of content

Overview.....	2
Operation Buttons.....	3
Overview of the Components.....	3
General information.....	5
READ AND SAVE THESE INSTRUCTIONS.....	5
Explanation of symbols.....	5
Intended use.....	6
Safety.....	7
Important Instructions.....	7
Check product and contents of delivery.....	12
Before first use.....	13
Operation.....	14
Switching the Appliance on/standby.....	14
Power Level Selection.....	14
Changing the battery of the remote control.....	15
Electric Connection.....	15
Time-delayed Switch-off.....	16
Switch Oscillation On/Off.....	16
Switch Display On/Off.....	16
Overheat Protection.....	16
Cleaning.....	17
Cleaning the device.....	18
Inspection.....	18
Storage	18
Technical data.....	19
Disposing of packaging.....	19
Dispose of old electrical device.....	19

General information

READ AND SAVE THESE INSTRUCTIONS

 This user manual is part of the Ceramic Tower Heater (hereinafter also called "device"). It contains important information on how to set up and use the device.

Before using the device, read the operating manual carefully, in particular the safety instructions. Failure to follow this operating manual may lead to severe injuries or product damage.

Keep this operating manual for future reference. If you pass this device on to a third party, you must also supply this operating manual.

Explanation of symbols



WARNING!

This signal symbol/word refers to a hazard with a medium level of risk that, if not avoided, may result in death or serious injury.



CAUTION!

This signal symbol/word refers to a hazard with a low level of risk that, if not avoided, may result in minor or moderate injury.

NOTICE!

This signal word warns of possible material damage.



NOTE! This symbol indicates useful additional information on the assembly or operation of your product.



The device features a tilt protection switch that switches the device off automatically as soon as it is tilted or lifted.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Special Safety Precautions for this appliance

You will find the following symbol with warning character on the appliance.



WARNING

In order to avoid overheating, do not cover the product.

Intended use

The device is exclusively designed for heating the immediate surroundings indoors. This device is exclusively intended for private use and not for the commercial sector. Use this heater only as described in this manual. Any other use not recommended by manufacturer may cause fire, electric shock, or injury to persons. The manufacturer or retailer assume no liability for damage caused by improper or incorrect use.

Safety

IMPORTANT INSTRUCTIONS



WARNING!

- Read all instructions before using this heater.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not use outdoors.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL BEFORE OPERATING PRODUCT.
- ALWAYS PLUG HEATERS DIRECTLY INTO A WALL OUTLET/RECEPTACLE. NEVER USE WITH AN EXTENSION CORD OR RELOCATABLE POWER TAP (OUTLET/POWERSTRIP).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

If provided, use handles when moving this heater.

KEEP COMBUSTIBLE MATERIALS SUCH AS FURNITURE, PILLOWS, BEDDING, PAPERS, CLOTHES AND CURTAINS AT LEAST 1.5M FROM THE FRONT OF THE HEATER AND KEEP AWAY FROM THE SIDES AND REAR.

- THIS HEATER IS NOT INTENDED FOR USE IN BATHROOMS, LAUNDRY AREAS & SIMILAR INDOOR LOCATION.
NEVER LOCATE HEATER WHERE IT MAY FALL INTO A BATHTUB OR OTHER WATER CONTAINER.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.



WARNING!

Risk of electric shock!

Faulty electric installation or excess mains voltage can cause an electric shock.

- Only connect the power cable if the mains voltage of the socket matches the informations shown on the rating plate.
- Only connect the power cable to an easily accessible socket so that you can quickly disconnect it from the mains power in the event of a malfunction.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Do not place the device directly beneath a wall socket.
- Do not use the device if there is visible damage or if the power cable is defective.
- If the power cable of the device is damaged, it must be replaced by the manufacturer, the manufacturer's customer service or a similarly qualified person in order to prevent hazards.
- Do not open the device. Leave repairs to a qualified service technician. Contact the service address indicated on the warranty card. Liability and warranty claims are excluded if you carry out repairs yourself, improperly connect the device to the power supply or operated it incorrectly.
- Only parts that match the original device data may be used for repairs. This device contains electrical and mechanical parts that are essential for protection against sources of danger.
- Do not operate the device by means of an exteral timer or separate remote-control system.
- Do not immerse the device or the power cable in water or other liquid. The heater is not to be used in wet or moist locations.
- Never touch the power cable with wet/damp hands.
- Never pull the power cable out of the socket by the cord; always grip the plug instead.
- Never use the power cable as a carry handle.
- Do not place any objects on the power cable.
- Keep the device and the power cable away from open flames and hot surfaces.
- Install the power cable so that no-one can trip over it.
- Do not bend the power cable and do not pass it over sharp edges.
- Never store or use the device where it can fall into a tub or sink. Do not use the device if it has fallen into water.
- Disconnect the device from the mains in the case of a fault (such as unusual noises or smoke).

- Do not insert or allow foreign objects to enter any opening as this may cause an electric shock or fire, or damage the heater.
- While the device is not in use or is being cleaned, or if a malfunction occurs, always turn the device off and disconnect it from the power supply.
- Do not use the device during a thunderstorm. Switch it off and pull the power cable out of the socket.



WARNING!

Risk of injury!

Improper handling poses a risk to children and persons with reduced physical, sensory or mental abilities (such as partially disabled or older persons with restricted physical and mental abilities) or a lack of experience and knowledge (such as older children).

- Children aged 8 years and older as well as persons with reduced physical, sensory or mental abilities or a lack of experience and knowledge may only use this device if they are supervised or have been given instruction on using the device in a safe way and understand the hazards involved.
- This device must not be used by children under 8.
- Keep children under 8 away from the device and the power cable.
- Children must not play with the device.
- Children under 8 years should only carry out cleaning and basic maintenance under adult supervision.
- Do not leave the device unattended when in use.
- Do not let children play with the packaging film. They may become tangled when playing and suffocate.



CAUTION!

Danger of burns!

Careless handling of the device can cause burns.

- Be careful when handling the device while it is hot.
- Please note that the device is still hot once it has been turned off.



WARNING!

Fire hazard!

Improper handling of the device can cause a fire.

- When setting up the device, make sure that there are no flammable objects or fabrics close by.
- To prevent heat build-up, do not place the device too close to a wall or directly beneath wall cabinets. The high temperatures of the device housing can ignite home furnishings and household items.
- To prevent overheating, do not cover the device.
- Do not operate the device close to flammable materials, such as pillows, newspapers or curtains.
- Do not use on soft surfaces, like a bed or soft, deep-pile carpets.

NOTICE!

Risk of damage!

Improper handling can damage the device.

- Operate the device on an easily accessible, level, dry, heat-resistant and sufficiently stable work surface. Never place the device on the edge of the work surface.
- Do not operate the device by means of an external timer or separate remote-control system.
- To avoid a build-up of heat, do not position the device directly against a wall or under wall-mounted cabinets or similar.
- Never place the device on or near hot surfaces (stove tops, etc.) and never expose the device to high temperatures (heaters, etc.) or to bad weather (rain, etc.).
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

Handling Batteries



WARNING!

- Do not expose batteries to excessive heat such as sunlight, fire or similar. There is a **risk of explosion!**
- Batteries are not toys. Keep away from children.
- Do not open batteries by force.
- Avoid contact with metal objects (rings, nails, screws, etc.). There is a **risk of short circuit!**
- A short circuit could cause the battery to heat up excessively or even to catch fire, resulting in injuries.
- For your own safety, cover the battery terminals with adhesive tape during transport.
- In case of battery leakage, make sure not to rub the liquid into your eyes or mucous membranes. In case of contact, wash your hands and rinse your eyes with clear water. Seek medical attention if any discomfort persists.



CAUTION!

Batteries can leak and lose battery acid. If the remote control is not used for a long period of time, remove the battery.

SAVE THESE INSTRUCTIONS

Check product and contents of delivery

Check the device and scope of delivery



WARNING!

Danger of suffocation!

Children may become tangled up in the packaging film when playing with it suffocate.

- Do not let children play with the packaging film.

NOTICE!

Risk of damage!

Be careful when opening the package with a sharp knife or other pointed object, as the product could easily be damaged.

- Proceed with great care when opening.

1. With both hands, lift the device out of the packaging.
2. Check that the delivery is complete
(see chapter "Check the device and scope of delivery").
3. Inspect the device and individual parts for damage. Do not operate a damaged device; instead, contact the manufacturer via the service center listed on the warranty card.

Before first use

Setting up the device

1. Place the device **1** on a level surface.
2. Plug the power cable **2** into a socket.

The device is set up.



Operation



CAUTION!

Danger of burns!

Careless handling of the device can cause burns.

- When using the device or if it is still hot from use, do not touch any part of the device other than the controls.
- Allow the device to completely cool down before moving or cleaning it.

Operation

NOTE:

- The operation is explained using the buttons on the appliance.
- The buttons can only be pressed once the appliance has been switched on by using the  Button.

Switching the Appliance on/standby

- Touch the  button to switch on the appliance. The appliance initiates power with HIGH mode and displays the current ambient temperature. The  indicator lamp lights. To avoid overheating, the fan is operating continuously. The  indicator lamp lights.
- Touch the  button again to switch into standby mode.

NOTE:

A 30 second timer will start in the display. During this period, the fan remains in operation to cool down the appliance. The  indicator lamp flashes. When the timer period has lapsed, the appliance will automatically switch into standby mode.



CAUTION!

When not using the appliance, disconnect the mains plug.

Power Level Selection

Press the **MODE** button repeatedly to choose between the available power levels.

-  Fan Operation
-  LOW (1300 Watt)
-  HIGH (2000 Watt)

Remote Control

NOTE:

The Batteries of the remote control has been secured with a foil for transport. This will extend the durability of the battery. Before initial use please remove this foil so that the remote control is ready for operation.

The range of the remote control is limited.

When using the remote control, please ensure that there are no obstacles placed between it and the sensor on the appliance.

Changing the battery of the remote control

If the range of the remote control is reduced during use, please proceed as follow:

1. Open the battery compartment of the bottom of the remote control by holding the lever inward and pulling out the battery compartment.
2. Replace the batteries with same type (AAA). Ensure correct polarity.
3. Then close the battery lid.

Notes for use

Connected Load

The appliance supports a power input of 2000 W.



CAUTION!

Overload

- Do not use multi-outlet power strips since this appliance is too powerful.
- Do not connect any other powerful appliances to the same electric circuit.

Safety Switch

Your fan heater features a safety switch that disconnects the power supply in case the appliance falls over. The safety switch prevents hazards caused by overheating.



CAUTION!

Place the appliance on a smooth, horizontal surface. Avoid carpets in order to prevent failure of the safety switch.

NOTE:

As soon as the safety switch has been activated, the appliance must be set and

Electric Connection

1. Make sure the voltage of the appliance (see rating label) matches the mains voltage to be used.

Operation

2. Connect the mains plug to a properly installed isolated ground socket. All indicator lamps light up briefly.
Use the + and - buttons to select a temperature between 15 and 35°C.

NOTE:

- Once the current ambient temperature has been reached, the appliance switches off and automatically maintains the set temperature level.
- There may be a slight difference between the displayed and the actual room temperature. This is due to the design and does not mean that the appliance is defective.

Time-delayed Switch-off

You can set a time-controlled switch-off for the appliance.

- Use the  button to select a time setting between 00 and 12.
- Upon expiry of the timer, the appliance will switch off automatically.

Switch Oscillation On/Off

- Press the  button to switch on oscillation. The appliance automatically rotates in the range of about 90 degrees. The  indicator lamp lights.

Switch Display On/Off

- Press the  button to switch the display and the indicator lamps on or off.

Overheat Protection

The appliance features an overheat protection mechanism causing the appliance to switch off automatically in case of overheating.

1. Use the  button to switch off the appliance and disconnect it from the mains socket by pulling the plug.
2. Let the appliance cool down for approx. 10 minutes before using it again.

NOTE:

If the overheat protection mechanism causes the appliance to switch off again after a short period, this might indicate a defect.

1. Switch off the appliance and disconnect it from mains.
2. Have the appliance checked by your dealer or our customer service.

Cleaning

- We recommend that the heater be cleaned at least once a month and before storage.
- Turn the heater OFF and unplug it. Allow it to cool before handling and storing.
- Use a dry cloth to clean the external surfaces of the heater.

DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.

- Clean your heater by the above-mentioned steps, then pack the heater in its original container and store it in a cool dry place.
- This heater is not disassembled.
- Under normal use and circumstances, the motor is factory lubricated and will require no further lubrication.



WARNING!

Danger of burns!

The device gets hot during operation. You could burn yourself.

- Let the device cool down completely before any cleaning or maintenance.

NOTICE!

Risk of damage!

Improper handling can damage the device.

- Do not use any harsh cleaning products, brushes with metal or nylon bristles, or sharp or metallic cleaning materials such as knives, hard scrapers or similar. They may damage the surfaces.

Cleaning the device

Wipe the housing of the device with a clean, slightly damp cloth.

Inspection

Before each use check that:

- The device is undamaged.
- The operating controls are undamaged.
- The accessories are in perfect condition.
- The vents are clear and clean.

Do not operate a damaged device or accessory. Instead, get it inspected and repaired by the manufacturer or their customer service or a similarly qualified person.

Storage

NOTICE!

Risk of damage!

Improper storage of the device can result in damage.

- Allow the device to completely cool down.
- Store the device in a clean, dry, frost-protected place out of the reach of children.

1. Thoroughly clean the device (see "Cleaning")
2. Roll up the mains cable without knots or bends.
3. If possible, pack the device in the original packaging.

Technical data

Model: PTC-2000C
Item number: 844590
Rating voltage: 220V-240 AC, 50Hz
Rated wattage: 2000W
Product size: 17.5 x 19.5 x 60cm
Cable length: 135cm

Disposing of the packaging

Please dispose of package in an environmentally friendly way.

Dispose of old electrical device

If the product should no longer work at all, please make sure that it is disposed of in an environmentally friendly way and according to local regulations.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

DISTRIBUTED BY:

ALDI STORES

1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT

844590



1800 898 750



service@wkfe.com.hk

MODEL : PTC-2000C

06/2025

1

YEAR WARRANTY