



# USER MANUAL

## BUG ZAPPER



AU

MODEL: 1349-B

702437

03/2026

03/2026

MADE IN CHINA

ALDI STORES  
1 SARGENTS ROAD,  
MINDUBURY NSW 2270  
WWW.ALDI.COM.AU

DISTRIBUTED BY



### 1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on setup and use. Read this manual carefully, especially the chapter safety, before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

### 2 SAFETY

#### 2.1 SIGNAL WORDS EXPLANATION

The following signal words are used in this manual, on the product and/or the packaging.

#### ⚠ WARNING!

» This signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### ⚠ CAUTION!

» This signal word indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### CAUTION!

» This signal word indicates a hazardous situation which, if not avoided, could result in property damage.

#### i NOTICE

» This signal word is a preferred signal word to address tips and practices not related to personal injury.

#### 2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Direct current (DC)

**IPX4**

Protected against splashing water from any angle.



Electrical devices that carry this symbol are rated as Protection Class II.



The RCM (Regulatory Compliance Mark) mark indicates that the appliance complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.



Warning! Risk of electric shock!

1

#### 2.3 GENERAL SAFETY INSTRUCTIONS

#### ⚠ WARNING! RISK OF ELECTRIC SHOCK

- » Faulty electric installation or excessive voltage can cause an electric shock.
- » Only connect the power cable if the voltage of the power source matches the information on the rating plate.
- » The product must only be operated with extra-low voltage, as indicated by the class II marking on the product.
- » Exposure to water may result in electric shock. Keep the product dry at all times.
- » An electric shock hazard may exist if water from a garden hose is directed at the insect killer.

#### ⚠ WARNING!

- » **Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).**
- » Contains small parts. Keep children under 5 years of age away from the product and its power cable.
- » This is not a toy. Children must not play with the product. Keep the appliance out of reach of children.
- » Do not leave the product unattended during use.
- » Turn off the light when input charging.
- » Do not stare at the operating light source. Do not look directly into LED as this may cause damage to your eyes.
- » The lamp in this appliance cannot be replaced. If it ceases to function, the appliance must be disposed of. Do not operate the appliance in environments containing flammable substances.
- » Always avoid the product to be located at corrosive environment.

#### CAUTION! RISK OF DAMAGE!

- » Improper assembly can damage the product.
- » Charge the product once the light output decreases to prevent the battery from suffering a deep discharge.
- » Ensure the USB shutter is properly assembled after charging to maintain IPX2 protection. The product must be kept indoors during charging.
- » Never place the product on or near hot surfaces (stove tops, etc.) and never expose the product to high temperatures (heaters, etc.) or to bad weather (rain, etc.).
- » Never immerse the product in water to clean it, and do not use a steam cleaner. This can damage the product.
- » Stop using the product if any of its components are cracked or deformed.
- » Do not attempt to repair or modify the product yourself.

#### ⚠ CAUTION! RISK OF EXPLOSION!

- » Never short-circuit the battery.
- » Never open the battery.
- » Do not throw the battery into a fire.
- » Only charge the product via the supplied USB cable on a suitable USB charger or via the USB port on a computer.
- » Charge the battery at room temperature.
- » This product contains batteries that cannot be replaced. Correctly dispose of the product once the battery has reached the end of its service life.

#### ⚠ CAUTION! RISK OF CHEMICAL BURNS!


- » Never open the battery.
- » If battery fluid leaks out, avoid contact with the skin, eyes and mucus membranes. Rinse the affected region immediately with plenty of clear water and contact a physician immediately.
- » Wear protective gloves in case of a leaky battery.

2

## NOTICE

» If the battery is defective, the complete product must be disposed of correctly.

## 3 PRODUCT OVERVIEW / PACKAGE CONTENT

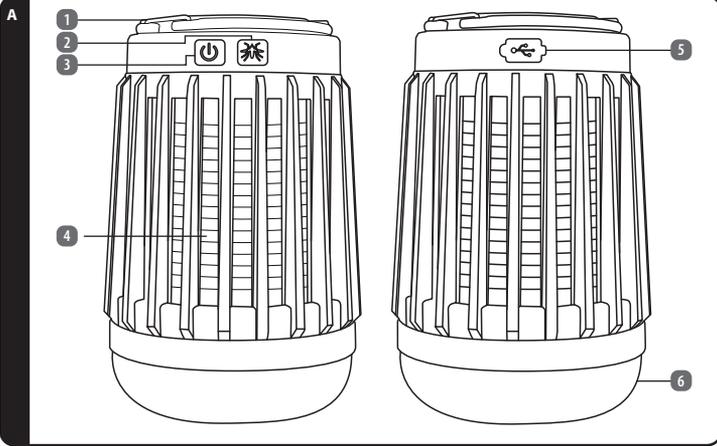

1 Hanger / built-in carabiner

3 Lighting switch


5 USB charging

2 Mosquito killer switch

4 Mosquito killer net

6 Lantern

USB charging cable (not in the illustration)

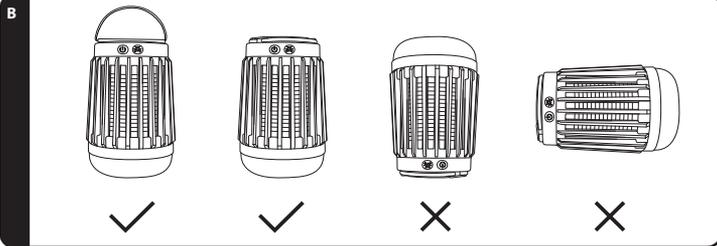

3

## 7 STORAGE

Avoid and protect the product from dust, water, moisture, frost, extreme temperature, high humidity and direct sunlight.

- Before storing the product, clean all parts of the product as described in the **CLEANING AND CARE** chapter.
- Dry the product completely before storage.
- Always store the product in a dry and cool place, at an ambient room temperature.
- Store the product out of reach from children and pets.

## 8 TECHNICAL DATA

Model:	1349-B
Battery type:	Lithium Ion, 18650, 3.7 V  , 1800 mAh
Supply voltage:	Input (USB): 5 V / 1 A
Protection class:	II
USB connection cable:	USB-C
Grid Voltage:	550 V 

## 9 DISPOSAL

### 9.1 DISPOSING OF THE PACKAGING



Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

### 9.2 DISPOSING OF THE PRODUCT



Dispose of the product in accordance with the applicable laws and regulations for your country.

5

## 4 BEFORE FIRST USE

### 4.1 CHECKING THE PRODUCT AND DELIVERY CONTENT

#### ⚠ WARNING! RISK OF SUFFOCATION!

» Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. they could suffocate or swallow small parts.

#### ⚠ CAUTION! RISK OF DAMAGE!

» Be cautious when opening the packaging not to damage the product. Avoid the use of sharp objects.

1. Take the product out of the packaging.
2. Remove the packaging materials and all plastic wrappings.
3. Check that the delivery is complete (refer to chapter **PRODUCT OVERVIEW**).
4. Check whether the product or individual parts are damaged. If this is the case, do not use the product.

## 5 USE

### 5.1 USING THE PRODUCT

This product is for indoor and outdoor use.

1. Mosquito killer: press the mosquito killer switch **2** to turn on or turn off.
2. Lantern: press lighting switch **3** to shift lighting mode: high (3W LED) - low (3W LED) - flash (3W LED) - lantern (9 LEDs).
3. Any mode of the lantern and the insect killer mode can be turned on simultaneously.
4. USB charging **5**: the product comes with a USB cable. Connect it to a compatible USB charger or a computer USB port. The charging indicator will illuminate red during charging and switch to green once fully charged. The product must be operated using a SELV power supply in accordance with the standards AS/NZS 61347-1 and AS/NZS 61347-2-13.

## 6 CLEANING AND CARE

### 6.1 CLEANING

#### ⚠ DANGER! RISK OF ELECTRIC SHOCK!

» Disconnect the product from the outlet before cleaning.

#### ⚠ WARNING! RISK OF ELECTRIC SHOCK OR SHORT CIRCUIT!

» Never immerse the product in water or other liquids. Avoid water or other liquids entering the housing.

#### ⚠ CAUTION! RISK OF DAMAGE!

» Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. These could damage the surfaces of the product.

1. Method of cleaning: please use water to clean the electrified grid directly. Avoid washing other parts such as the switch, USB charging port, etc., directly during cleaning.
2. Recommended cleaning frequency: monthly, or more often depending on mosquito activity.

4

6